



ExMax ¼ turn actuators – size M

Electrical, explosion proof rotary actuators with integrated Ex-i circuit (optional)
On-off / 3-pos. control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension
30 – 50 Nm with safety operation (spring return), optional with limit switches
ATEX tested in acc. with directive 2014/34/EU for zone 1, 2, 21, 22

ExMax - ... - F3
ExMax - ... - SF3
ExMax - ... - BF3
ExMax - ... - CTM


Subject to change!

Compact. Easy installation. Universal. Cost effective. Safe.

Type	Torque	Supply	Motor running time	Spring return	Control mode	Feedback	Wiring diagram
ExMax- 30 - F3	30 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	≤ 3 s/90°	On-off	–	SB 2.4 + 2.5
ExMax- 50 - F3	50 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	≤ 3 s/90°	On-off	–	SB 2.4 + 2.5
ExMax- 30 - SF3	30 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	≤ 3 s/90°	On-off	2 × limit switches	SB 2.4 / 2.5 + 3.2
ExMax- 50 - SF3	50 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	≤ 3 s/90°	On-off	2 × limit switches	SB 2.4 / 2.5 + 3.2
ExMax- 30 - BF3	30 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	≤ 3 s/90°	On-off	2 × limit switches + Ex-i circuit	SB 2.4 / 2.5 + 3.2 + 7.4
ExMax- 50 - BF3	50 Nm	24...240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	≤ 3 s/90°	On-off	2 × limit switches + Ex-i circuit	SB 2.4 / 2.5 + 3.2 + 7.4
ExMax- ... - CTM	Types as above with aluminium housing and seawater resistant coating (cable glands brass nickel-plated)						

Product views and applications

Fire damper

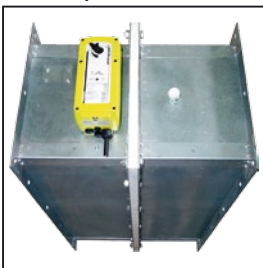

Ball valve



Throttle valve



Description

The ExMax actuators are a revolution for safety, fire and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in Ex-areas zone 1, 2 (gas) and zone 21, 22 (dust).

Highest protection class (ATEX) and IP66 protection, small dimensions, only 9,5 kg weight, universal functions and technical data, an integrated heater guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected.

...Max-...-F3 actuators are equipped with spring return fail safe function. Additionally the ...Max-...-SF3 and ...-BF3 actuators are equipped with 2 integrated, potential free auxiliary switches each and ...Max-...-BF3 comes with an intrinsically safe circuit to connect an external passive potential free thermostat (e.g. ...Pro-TT-...). Standard shaft connection is a double square direct coupling with 16 × 16 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptations for ball valves and throttle valves and other armatures.

Highlights

- ▶ For all type of gas, mists, vapours and dust for use in zone 1, 2, 21 and 22
- ▶ Universal supply unit from 24...240 VAC/DC
- ▶ Motor running times 40–60–90–120–150 s/90° adjustable on site
- ▶ On-off control with spring return function, running time ≤ 3 s/90°
- ▶ Ex-i circuit for direct connection of a passive potential free safety thermostat
- ▶ 2 integrated auxiliary switches, switching at 5° and 85° angle of rotation
- ▶ 30–50 Nm actuators in the same housing size
- ▶ 100 % overload protected
- ▶ Compact design and small dimension (L × W × H = 288 × 149 × 116 mm)
- ▶ Direct coupling to the damper shaft with double square connection 16 × 16 mm
- ▶ 95° angle of rotation inclusive 5° pretension
- ▶ Robust aluminium housing (optional with seawater resistant coating)
- ▶ IP66 protection
- ▶ Simple manual override included + preparation for comfortable manual override
- ▶ Gear made of stainless steel and sinter metal
- ▶ Weight only ~ 9,5 kg
- ▶ Integral heater for ambient temperatures down to -40 °C
- ▶ Integral safety temperature sensor
- ▶ Integral equipment for manual adjustment (push button, lamp, switch)
- ▶ Preparation for adaptable and adjustable auxiliary switches type ...Switch
- ▶ Wide range of accessories



ExMax-...-F3

ExMax-...-SF3

ExMax-...-BF3

SCHISCHEK
EXPLOSIONPROOF

Special option

... -CTM

Technical data	ExMax- 30 - F3	ExMax- 50 - F3	ExMax- ... - SF3	ExMax- ... - BF3
Torque motor (min.)	30 Nm	50 Nm	30 resp. 50 Nm	30 resp. 50 Nm
Torque spring (F)	min. 30 Nm	min. 50 Nm	min. 30 resp. 50 Nm	min. 30 resp. 50 Nm
Dimension of external torque	Above mentioned torques are min. torques in blocked position, external torque should be max. 80 % of max. actuator torque but min. 10 Nm			
Supply voltage / frequency	24...240 VAC/DC, $\pm 10\%$, self adaptable, frequency 50...60 Hz $\pm 20\%$			
Power consumption	max. starting currents see ① Extra information (in acc. with voltage, $I_{start} \gg I_{rated}$), approx. 5 W holding power, approx. 16 W for heater			
Protection class	Class I (grounded)			
Angle of rotation and indication	95° incl. $\sim 5^\circ$ pretension, mechanical value indication			
Working direction	Selectable by left/right mounting to the damper/valve shaft			
Motor running times	40 / 60 / 90 / 120 / 150 s/90° selectable on site			
Motor	Brushless DC motor			
Spring return (F)	≤ 3 s/90°, function in the event of loss of power resp. opening of line 3			
Safety operation	min. 1,000 in acc. with construction of damper and ambient			
Response time spring return	up to 1 sec. after power failure			
Control mode	On-off			
Intrinsically safe circuit (type ...-BF3 only)	-	-	-	Ex-i circuit to connect a passive potential free thermostat as a safety sensor for fire dampers directly to the actuator with M12 quick connection
IS connection (type ...-BF3 only)	-	-	-	2 aux. switches (5° and 85°)
Integrated aux. switches (type ...-SF3 and ...-BF3 only)	-	-	2 aux. switches (5° and 85°)	2 aux. switches (5° and 85°)
Axle of the actuator	Double square 16 x 16 mm, direct coupling, 100 % overload protected			
Electrical connection	Cable ~ 1 m, wire cross section 0.5 mm ² , equipotential bonding 4 mm ² . Connections in hazardous areas require an Ex-e terminal box!			
Diameter of cable	$\sim \varnothing 7.0$ mm	$\sim \varnothing 7.0$ mm	$\sim \varnothing 7.0 + 7.6$ mm	$\sim \varnothing 9.6$ mm
Cable gland	2 cable glands in version ...-SF3			
Manual override	M16 x 1.5 mm			
Integral heater	Use delivered socket wrench, max. 4 Nm			
Housing material	Integral, controlled heater for ambient temperature down to -40°C			
Dimensions (L x W x H)	Aluminium die-cast housing, coated. Optional with seawater resistant coating (...-CTM)			
Weight	288 x 149 x 116 mm, for diagrams see ① Extra information			
Ambients	~ 9.5 kg aluminium housing			
Humidity	Storage temperature $-40...+70^\circ\text{C}$, working temperature $-40...+40^\circ\text{C}$ at T6 and $-40...+50^\circ\text{C}$ at T5			
Operation mode	0...90 % rH, non condensing			
Maintenance	100 % ED are permitted (ED = duty cycle)			
Wiring diagrams	Maintenance free relative to function, maintenance must comply with regional standards, rules and regulations			
Scope of delivery	SB 2.4 + 2.5	SB 2.4 + 2.5	SB 2.4 + 2.5 + 3.2	SB 2.4 + 2.5 + 3.2 + 7.4
Parameter at delivery	Actuator with 1 m cable, 4 screws M8 x 140 mm, 4 nuts M8, Allen key for simple manual override			
	30 Nm, 90 s/90°	50 Nm, 90 s/90°	30 resp. 50 Nm, 90 s/90°	30 resp. 50 Nm, 90 s/90°

Approbations

ATEX directive	2014/34/EU
EC type-approved	PTB 04 ATEX 1028 X
IECEX certified	IECEX PTB 07.0057X
Approval for gas	II 2 (1) G Ex d [ia] IIC T6, T5
Approval for dust	II 2 (1) D Ex tD [iaD] A21 IP66 T80, T95°C
CE identification	CE № 0158
EMC directive	2014/30/EU
Low voltage directive	2014/35/EU
Enclosure protection	IP66 in acc. with EN 60529
Ex-i circuit data	see table (T 1.0)

Special solutions and accessories





...-CTM	Types in aluminium housing with seawater resistant coating, parts nickel-plated
VAMH	Casing in VA for ...Max actuators size M
ExBox-...	Ex-e terminal boxes for zone 1, 2, 21, 22
MKK-M	Mounting bracket for boxes type ...Box-... directly on actuator
ExPro-TT-...	Safety temperature trigger in acc. with ATEX
ExSwitch	2 external aux. switches, adjustable for zone 1, 2, 21, 22
AR-16-xx	Reduction part for 16 mm square connection to 14 or 12 mm shafts
Kit-S8	Cable glands nickel-plated
Adaptions	for dampers and valves on request
ExMax-...-S3	Ambient temperature up to $+60^\circ\text{C}$ (T4), 110...240 VAC/DC, 25 % ED

ExMax-M-F3_en
V01 - 20-Apr-2016



Electrical connection

All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage!
The safety operation of the spring return function works if the supply voltage is cut or line 3 opened. For electrical connection inside hazardous areas an Ex-e terminal box, certificated in acc. with ATEX is required (e.g. ExBox).
An over-current protection fuse < 10 A has to be provided by installer.
Note: The initial current is appr. 2 A for 1 second.

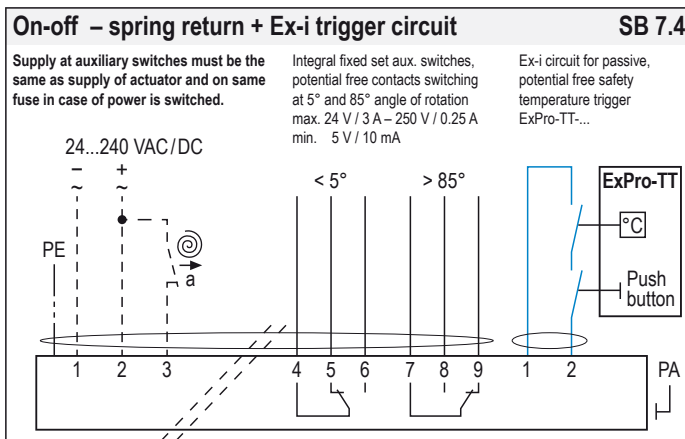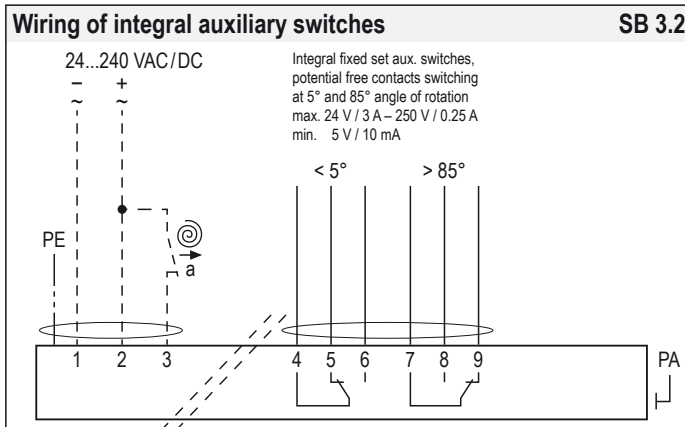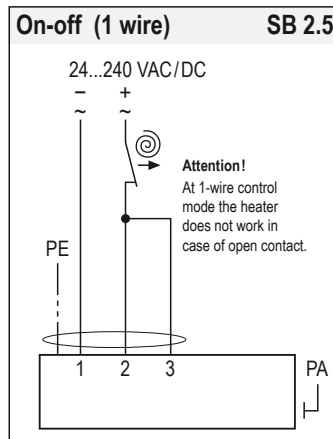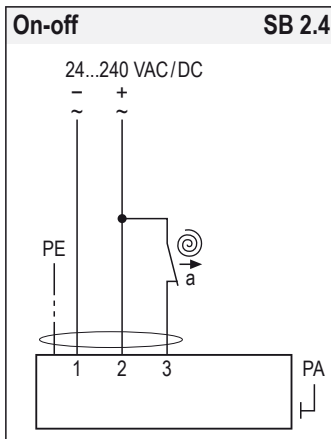

Ex-i intrinsic safe data – for temperature trigger ExPro-TT T 1.0


$U_o = 10,6 V$
 $I_o = 11 mA$
 $P_o = 30 mW$
 $C_i = 0$
 $L_i = 0$

	IIC	IIB	IIA
L_o	2 mH	5 mH	10 mH
C_o	830 nF	3,7 μF	4,5 μF

Parameters, adjustments and failure indication

Switch – Push button – Lamp for adjustment (behind the blanking plug)

10-position switch (S)
Push button (T)
3-colour LED

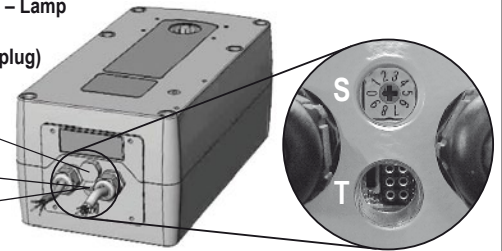

Parameter selection

Example:
ExMax-30-BF

Requested parameter:
Torque 30 N
Motor running time 90 s/90°

Result:
Switch position **02**

Type	Torques	
ExMax- 30 -BF3	30 N	
Running times	Position of switch (S)	
40 s/90°	00	05
60 s/90°	01	06
90 s/90°	02	07
120 s/90°	03	08
150 s/90°	04	09

Functions, adjustments and parameters

A) Self adjustment of angle of rotation:

Switch (S) into position 02, then push button (T) for minimum 3 seconds. The actuator will drive into both end positions to be adjusted. LED indicates GREEN. Adjustment time needs approx. 93 sec. (90 sec. "On", 3 sec. "Off"). After that, switch (S) into the position acc. with your required torque and running time.

B) Selection of running time and torque:

Put switch (S) into the correct selected position in acc. to above table. The selected parameter will work at next operation of the actuator. Adjustment can be done even without supply voltage. If supply voltage is available turn switch only if actuator is not running.

C) Function of a passive sensor in the Ex-i circuit:

If the sensor opens the Ex-i circuit the actuator runs into its safety end-position with spring return.

D) Additional information for control mode:

a closed = actuator goes ON
a open = spring return mode

The rotation direction depends on left/right mounting of the actuator to the damper/valve.

Installation

Ex area –
zone 1, 2, 21, 22



Safe area



ExBox

supply*
24...240 VAC/DC $\pm 10\%$

* electrical wiring see diagrams



Attention

During commissioning apply a self adjustment drive.
Regard duty cycle at motor running times!
Never use spring return actuators without external load.



Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations for hazardous Ex-areas must be complied. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used.

For electrical connection an Ex-e terminal box is required (e.g. ExBox-...).

Attention: If the actuator is put out of operation all Ex rules and regulations must be applied. You have to cut the supply voltage before opening the terminal box!

The cables of the actuator must be installed in a fixed position and protected against mechanical and thermal damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP66.

For outdoor installation a protective weather shield against sun, rain and snow should be applied to the actuator as well as a constant supply at terminal 1 and 2 for the integral heater.

Actuators are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Ex-actuators must not be opened by the customer.

B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

Attention: Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 16 x 16 mm. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

D. Temperature trigger ...Pro-TT...

The actuator ...Max-...-BF3 will work only with the temperature trigger ExPro-TT...

E. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

F. Operation at ambient temperatures below -20 °C

All actuators are equipped with a regulated integrated heating device designed for employments down to -40 °C ambient temperature. The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

1. After mounting the actuator must be immediately electrically connected.
2. The heater switches on automatically when actuator reaches internally -20 °C. It heats up the actuator to a proper working temperature, then heater switches off automatically. Actuator will not run during heating process.
3. The adjustment options are only ensured after this heating up period.

G. Excess temperatures

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

H. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

I. Mechanical protection

The actuator must be operated with an outside load of at least 10 Nm.

After installing the actuator to the damper/armature an automatic alignment has to be accomplished in order to obtain a "gentle" blockade/stop. This function protects the damper/armature by reducing the end position's/blockade speed in order to avoid mechanical overload. The actuator aligns specifically once with 90 s/90° onto each position and recognizes the blockade position in order to reduce the motor performance during operation briefly before reaching the end/blockade position.

J. Intrinsically safe circuits

The actuator itself has a flameproof enclosure. The supply of the push button (adjustment drive), the 10-position switch (adjustment of torque and running time), the LED indicator and the sensor connection ExPro-TT is performed intrinsically safe!

Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication

Accessory ExSwitch – adaptable Ex-d auxiliary switch



For an end or inclined position indication it is possible to retrofit external, adjustable, explosion proof auxiliary switches type ExSwitch. The switch housing is mounted directly to the actuator and the switches are linked to the actuator's square connector. The switches deliver a potential free output and can be adjusted separately. They are connected by the included cable tail.

Accessory ExBox – adaptable Ex-e terminal box



For electrical connection of ...Max actuators inside the hazardous area an Ex-e terminal box is required. ExBoxes are appropriate terminal boxes and placed at the disposal. To adapt the ...Box directly to the actuator housing a mounting bracket type MKK-M is required.

ExBox- 3P for ...Max-...-F3
 ExBox- Y/S for ...Max-...-SF3
 ExBox- BF for ...Max-...-BF3