


Betriebsanleitung
Mode d'emploi
Operating instructions

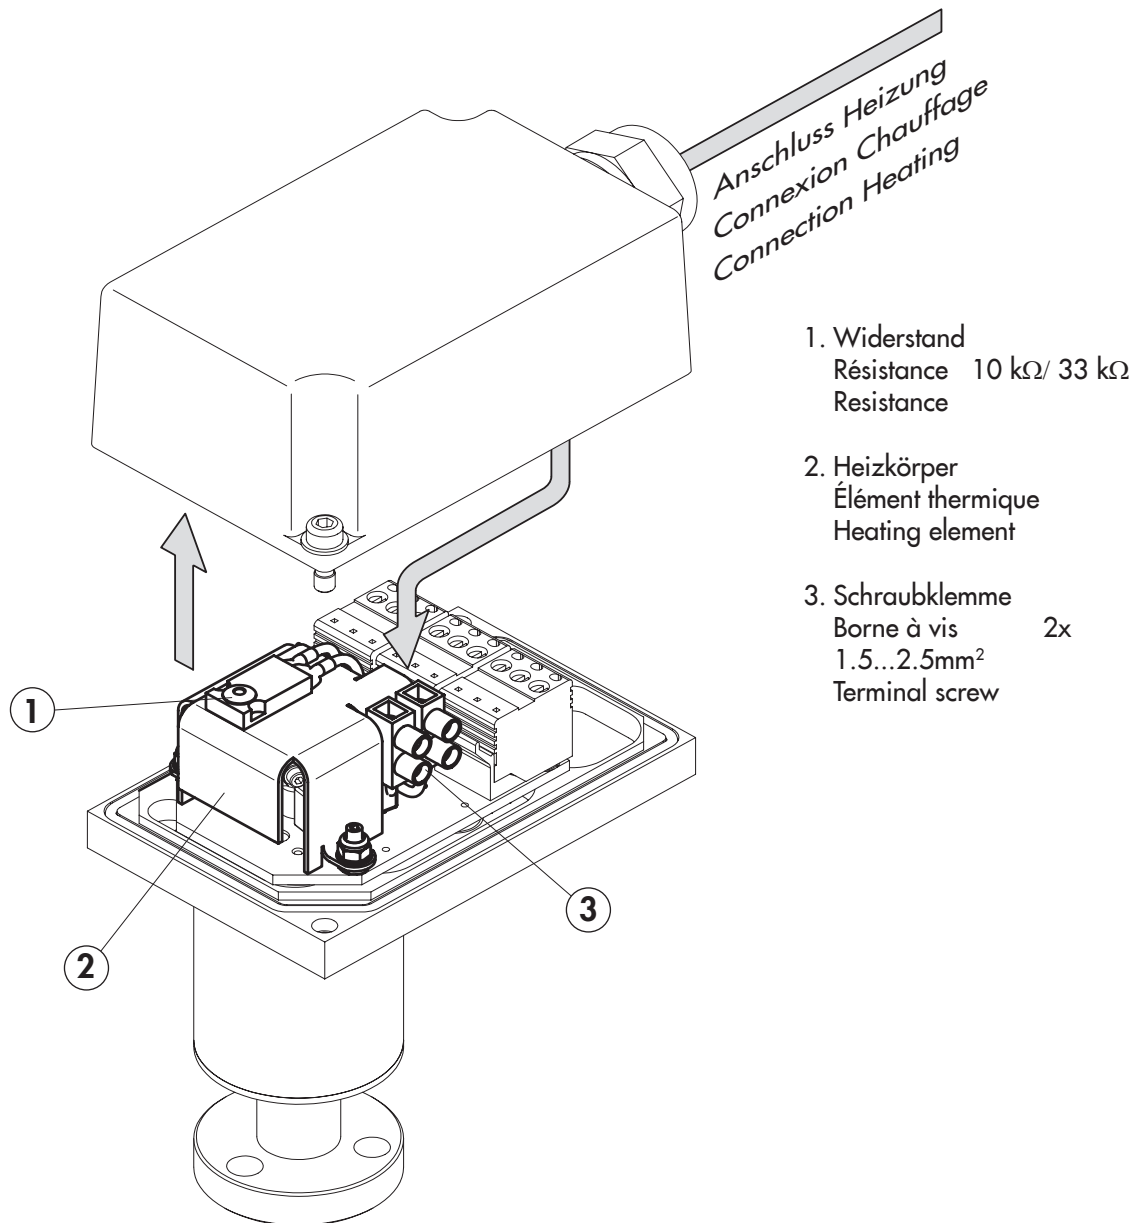

Spezifikationen / Spécifications / Specifications

Umgebungstemperatur/ Température ambiante/ Ambient temperature: -55...+80°C

Anschlüsse / Connexions / Connections

Schraubklemme/ Borne à vis/ Terminal screw: 2x 1.5...2.5mm²

Heizung Zub. / Chauffage Acc./ Heating Acc. **68**: $U_{\text{SUPPLY}} = 120...127 \text{ VAC/DC}$
 $I_{\text{max.}} = 6 \text{ A}$
 $R = 10 \text{ k}\Omega$

Heizung Zub. / Chauffage Acc./ Heating Acc. **69**: $U_{\text{SUPPLY}} = 220...240 \text{ VAC/DC}$
 $I_{\text{max.}} = 6 \text{ A}$
 $R = 33 \text{ k}\Omega$