

# InPro-C Temperature/humidity sensor


connectable exclusively to transmitters **InCos-D** for measuring of temperature and/or humidity

Subject to change!

Type	Function	Range	Sensor length	Connectable to	Connection	Installation area sensor
InPro-CT-...	Temperature sensor	-40...+125 °C*	50 / 100 / 150 / 200 mm	InCos-D...	Plug and socket	Safe area
InPro-CF-...	Humidity sensor	0...100 % rH	50 / 100 / 150 / 200 mm	InCos-D...	Plug and socket	Safe area
InPro-CTF-...	Combination sensor	-40...+125 °C* / 0...100 % rH	50 / 100 / 150 / 200 mm	InCos-D...	Plug and socket	Safe area

↑ Sensor length \* at 50 mm length -40...+80 °C

## Product views and applications

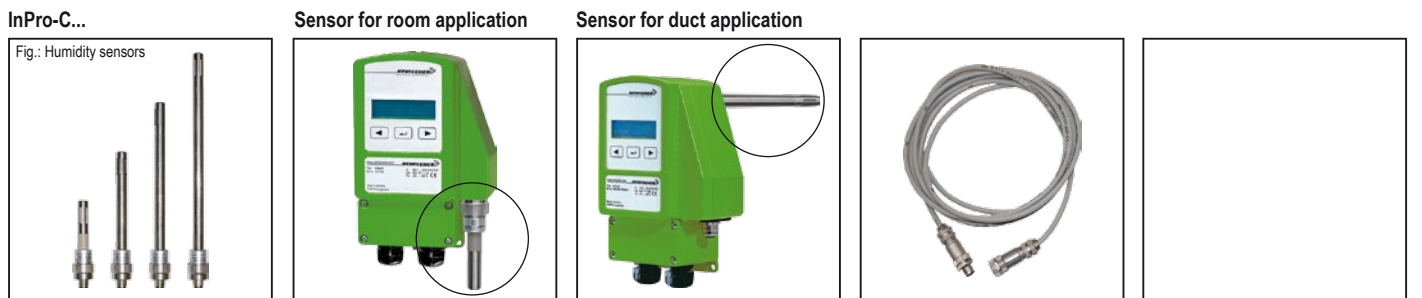

Technical data	InPro- CT -...	InPro- CF -...	InPro- CTF -...
Application as	Temperature sensor	Humidity sensor	Temperature / humidity sensor
Measuring range	-40...+125 °C * * -40...+80 °C at 50 mm length	0...100 % rH	-40...+125 °C * / 0...100 % rH * -40...+80 °C at 50 mm length
Sensor length	InPro-CT- 50 = 50 mm InPro-CT-100 = 100 mm InPro-CT-150 = 150 mm InPro-CT-200 = 200 mm	InPro-CF- 50 = 50 mm InPro-CF-100 = 100 mm InPro-CF-150 = 150 mm InPro-CF-200 = 200 mm	InPro-CTF- 50 = 50 mm InPro-CTF-100 = 100 mm InPro-CTF-150 = 150 mm InPro-CTF-200 = 200 mm
Response time sensor	T90 / 20 s	T90 / 4 s	T90 / 20 s, T90 / 4 s
Accuracy temperature	±0,4 °C at 25 °C ±0,02 °C/°C		
Accuracy humidity	±3 % at 10...90 % rH / ±5 % at < 10 % rH and > 90 % rH		
Housing protection	IP66 acc. to EN 60529		
Material thermowell	Stainless steel 1.4305, at length 50 mm in plastic (max. room temperature +80 °C)		
Filter element	at humidity sensors with mesh size 100 µm		
Ambient temperature / humidity	-40...+125 °C (-40...+80 °C at 50 mm length) / 0...100 % rH		
Storage temperature	-40...+125 °C (-40...+80 °C at 50 mm length)		
Installation area sensor	Safe areas		
Scope of delivery	InPro-C... sensor with plug connector and gasket (EPDM) for duct installation		


## Description

InPro-C... sensor is a measuring element which is in combination with an ...Cos-D... transmitter for temperature, humidity or combination of temperature and humidity measuring. **InPro-C... sensors are only for use with InCos-D... transmitters.** The electromechanical connection is done with a socket on the front resp. on the back side of the transmitter, but only 1 InPro-C... per module is allowed and can be used. **Warning:** Aggressive gases can destroy the sensor element.

## Accessories

<b>MFK</b>	Mounting flange for duct mounting for variable immersion depth in ducts
<b>MKR</b>	Mounting bracket for round ducts up to Ø 600 mm
<b>TH-VA</b>	Immersion sleeve in stainless steel V4A / DIN EN 1.4571, length 120 mm. Other length on request.
<b>Kit-FA-VA</b>	Sinter filter cap for humidity sensors in stainless steel, mesh size 100 µm. <b>Not for high humidity measurements!</b>
<b>VL3</b>	Sensor extension cable, 3 m, PVC


**Accuracy temperature and humidity incl. hysteresis**

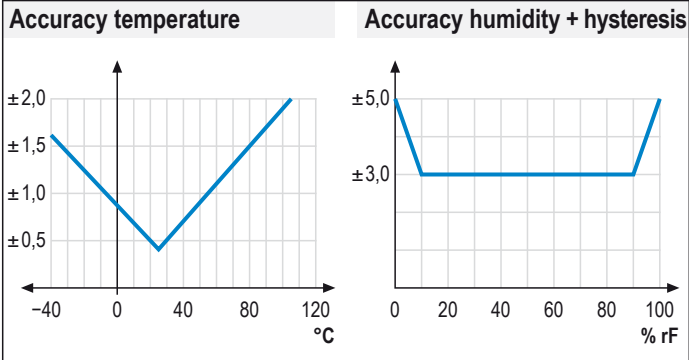

**Max. Medium temperature (surface temperature)**

Max. medium temperature	125 °C	(for sensor length 100–200 mm)
	80 °C	(for sensor length 50 mm)

**Mounting room sensor (at terminal box side)**

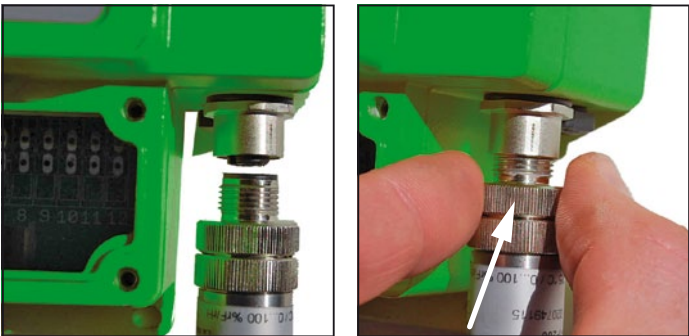

For mounting the sensor must be plugged into the socket and screwed on the sensor by turning the lower knurled screw clockwise. Tighten hand-screwed only. A small clearance between transmitter and sensor has to be accepted due to production conditions.




**Important information for installation and operation**

- A. InPro-C... sensor**  
The power for InPro-C... sensor is supplied with the transmitter's circuit. Unused sensor entries have to be closed with the black caps.
- B. Temperature flow**  
When measuring temperature over the max. allowed environmental temperature of the transmitter of +50 °C regard that no temperature flow over the sensor takes place. The mounting of the sensor has to ensure that errors due to heat dissipation are within the tolerance limits and the max. allowed environmental temperature is not exceeded.
- C. Mounting**  
Screw the sensor into the socket of the transmitter. The sensor cannot be opened as parts of the element are moulded. A small distance tolerance between transmitter and sensor has to be accepted due to production conditions.

**Electric characteristics (max.)**

U ≤ 5 V  
I < 0,5 mA


**Mounting duct sensor (back side)**

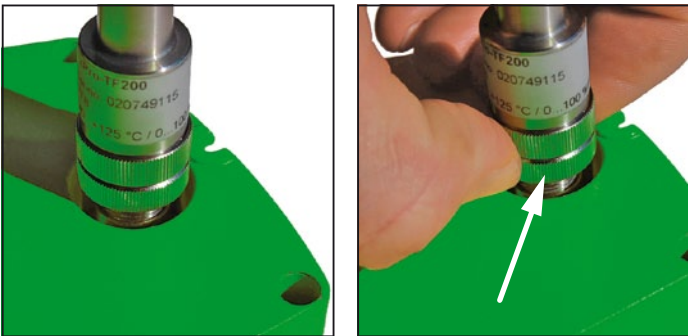

For mounting the sensor must be plugged into the socket and screwed on the sensor by turning the lower knurled screw clockwise. Tighten hand-screwed only. A small clearance between transmitter and sensor has to be accepted due to production conditions.

**MFK mounting flange for duct installation**

The flange is to be moved over the sensor and fixed with the adjusting screw on the side. The flange can be mounted with 4 screws directly to the duct.

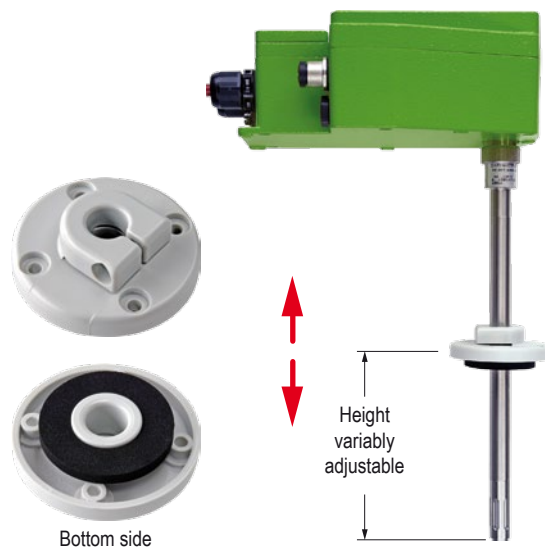

**Dimensions [mm]**

