

---

# User manual M3

Pt100 2-/3-/4-wire -200.0°C...850°C / -328.0°F...1562.0°F



## Technical features:

- red display of -19999...99999 Digits (optional: green, orange or blue display)
- minimal installation depth: 90 mm without plug-in screw terminal
- min-/max-memory
- display flashing at threshold value exceedance / threshold value undercut
- permanent min/max-value recording
- brightness control
- programming interlock via access code
- protection class IP65 at the front side
- plug-in screw terminal
- optional: 2 PhotoMos outputs
- optional: analog output
- accessories: PC-based configuration-kit PM-TOOL with CD & USB-adapter for devices without keypad and for a simple adjustment of standard devices

## Identification

| STANDARD-TYPES                               | ORDER NUMBER 2-/4-wire                                   | ORDER NUMBER 3-wire                                      |
|--|--|--|
| Pt100 2-/3-/4-wire<br>Housing size: 48x24 mm | <b>M3-7TR5A.010C.S70BD</b><br><b>M3-7TR5A.010C.770BD</b> | <b>M3-7TR5A.030C.S70BD</b><br><b>M3-7TR5A.030C.770BD</b> |

### Options – breakdown of order code:

|   | M | 3 | 7 | T | R | 5 | B. | 0 | 1 | 0 | C. | 7 | 7 | 2 | B | D |   |
|---|---|---|---|---|---|---|----|---|---|---|----|---|---|---|---|---|---|
| <b>Standard type M line</b>                                 |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Dimension</b>  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> D physical unit  |
| <b>Installation depth</b><br>109 mm, incl. plug-in terminal |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Version</b>  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> B B  |
| <b>Housing size</b><br>48x24x90 mm (BxHxD)                  |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Switching points</b>   |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 0 no switching points  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 2 2 PhotoMos-outputs   |
| <b>Display type</b><br>Temperature                          |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Protection class</b>   |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 1 without keypad, operation on the back side via programming plugs |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 7 IP65 / plug-in terminal  |
| <b>Display colour</b><br>Blue<br>Green<br>Red<br>Orange     |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Supply voltage</b>   |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 7 24 VDC galv. insulated   |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> S 85-265 VAC   |
| <b>Number of digits</b><br>5-digit                          |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Measuring input</b>  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> C Pt100 up to 850°C  |
| <b>Digit height</b><br>10 mm                                |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Analog output</b>  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 0 without  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> X 0-10 VDC, 0/4-20 mA  |
| <b>Digital input</b><br>without                             |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <b>Temperature devices</b>  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 1 Pt100 2-/4-wire  |
|   |   |   |   |   |   |   |    |   |   |   |    |   |   |   |   |   | <input type="checkbox"/> 3 Pt100 3-wire   |

Please state physical unit by order, e.g °C

---

## Contents

|   |           |
|---|-----------|
| <b>1. Brief description</b>   | <b>2</b>  |
| <b>2. Assembly</b>  | <b>3</b>  |
| <b>3. Electrical connection</b>   | <b>4</b>  |
| <b>4. Functions and operation description</b>   | <b>6</b>  |
| <b>4.1. Programming software PM-TOOL</b>  | <b>7</b>  |
| <b>5. Setting up the device</b>   | <b>8</b>  |
| <b>5.1. Switching on</b>  | <b>8</b>  |
| <b>5.2. Standard parameterisation (flat operation level)</b>  | <b>8</b>  |
| Value assignment for triggering of the signal input   |           |
| <b>5.3. Programming interlock „RUN“</b>   | <b>11</b> |
| Activation/Deactivation of the programming interlock or change into the professional level<br>respectively back into the flat operation level |           |
| <b>5.4. Extended parameterisation (professional operation level)</b>  | <b>12</b> |
| <b>5.4.1. Signal input parameter „INP“</b>  | <b>12</b> |
| Value assignment for triggering of the signal input   |           |
| <b>5.4.2. General device parameter „FCT“</b>  | <b>15</b> |
| Superior device functions like min/max permanent, brightness control, as well as the control of the<br>keyboard configuration                 |           |
| <b>5.4.3. Safety parameter „COD“</b>  | <b>19</b> |
| Assignment of user and master code for locking or access to certain<br>parameters like e.g. analog output and alarms, etc.                    |           |
| <b>5.4.4. Analog output parameter „OUT“</b>   | <b>20</b> |
| Analog output functions   |           |
| <b>5.4.5. Relay functions „REL“</b>   | <b>22</b> |
| Parameter for the definition of the setpoints   |           |
| <b>5.4.6. Alarm parameter „ALI...ALY“</b>   | <b>24</b> |
| Activator and dependencies of the alarms  |           |
| <b>6. Reset to factory settings</b>   | <b>27</b> |
| Reset of the parameter to the factory default settings  |           |
| <b>7. Alarms / Relays</b>   | <b>28</b> |
| Function principle of the switching outputs   |           |
| <b>8. Technical data</b>  | <b>30</b> |
| • <b>Safety advices</b>   | <b>32</b> |
| • <b>Error elimination</b>  | <b>33</b> |

## 1. Brief description


The panel meter instrument **M3-7C** is a 5-digit device for Pt100 temperature sensors and a visual threshold value monitoring via the display. The configuration happens via three keys at the front or by the optional PC software PM-TOOL. The integrated programming interlock prevents unrequested changes of parameters and can be unlocked again with an individual code. Optional an analog output for further processing in the equipment is available. And on demand two free adjustable setpoints with which threshold values can be controlled and reported to an superior master display.

The electrical connection is done via plug-in terminals on the back side.

Selectable functions like e.g. the recall of the min/max-value, a direct threshold value regulation during operation mode, complete the modern device concept.

## 2. Assembly

Please read the *Safety advices* on *page 25* before installation and keep this user manual for future reference.

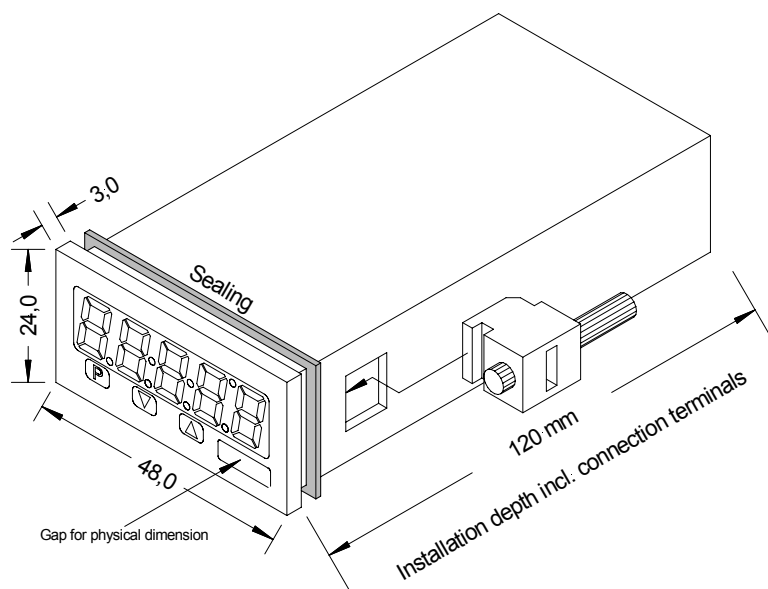


1. After removing the fixing elements, insert the device.
2. Check the seal to make sure it fits securely.
3. Click the fixing elements back into place and tighten the clamping screws by hand. Then use a screwdriver to tighten them another half a turn.

**CAUTION!** The torque should not exceed 0.1 Nm!


**Change signs of the physical unit before assembly via a channel at the side of the front! The change can only be done from the outside before assembly!**

### 3. Electrical connection


**Type M3-7TR5A.010C.S70BD 2-/4-wire**  
**Type M3-7TR5A.030C.S70BD 3-wire**  
 with a supply of 100-240 VAC

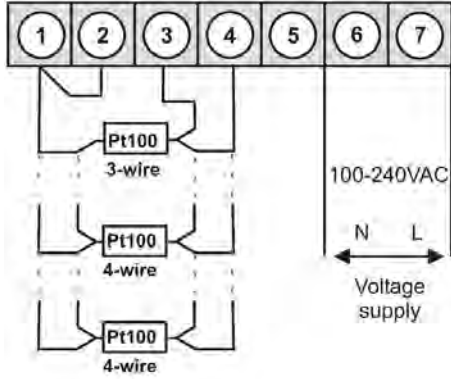


Options:

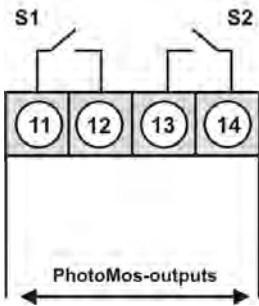

**Type M3-7TR5A.010C.770BD 2-/4-wire**  
**Type M3-7TR5A.030C.770BD 3-wire**  
 with a supply of 24 VDC

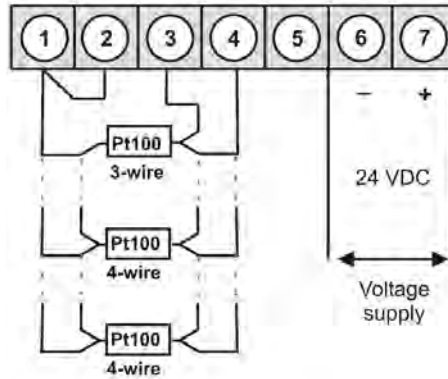

Options:

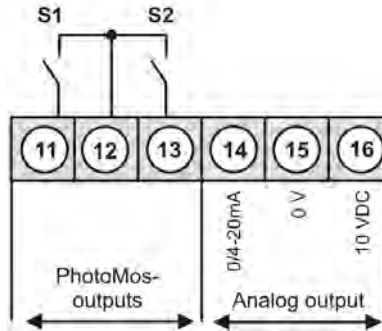

## 4. Function and operation description

### Operation

The operation is divided into three different levels.

#### Menu level (delivery status)
















This level is for the standard settings of the device. Only menu items which are sufficient to set the device into operation are displayed. To get into the professional level, run through the menu level and parameterise "PROF" under menu item *RUN*.

#### Menu group level (complete function volume)


Suited for complex applications as e.g. linkage of alarms, setpoint treatment, totaliser function etc. In this level function groups which allow an extended parameterisation of the standard settings are available. To leave the menu group level, run through this level and parameterise „ULOC,, under menu item *RUN*.

#### Parameterisation level:

Parameter deposited in the menu item can here be parameterised. Functions, that can be changed or adjusted, are always signalled by a flashing of the display. Settings that are made in the parameterisation level are confirmed with [P] and thus safed. By pressing the [O]-key („zero-key“) it leads to a break-off of the value input and to a change into the menu level. All adjustments are safed automatically by the device and it changes into operating mode, if no further key operation is done within the next 10 seconds.

| Level                  | Key   | Description   |
|------------------------|---|---|
| Menu level             |   | Change to parameterisation level and deposited values.  |
|                        |   | Keys for up and down navigation in the menu level.  |
|                        |   | Change into operation mode by pushing both navigation keys at the same time.                            |
| Parameterisation level |    | To confirm the changes made at the parameterization level.  |
|                        |   | Adjustment of the value / the setting.  |
|                        |   | Change into menu level or stop of the value input, by pushing both navigation keys at the same time.    |
| Menu group level       |    | Change to menu level  |
|                        |   | Keys for up and down navigation in the menu group level.  |
|                        |   | Change into operation mode or return into menu level, by pushing both navigation keys at the same time. |

**Function chart:**

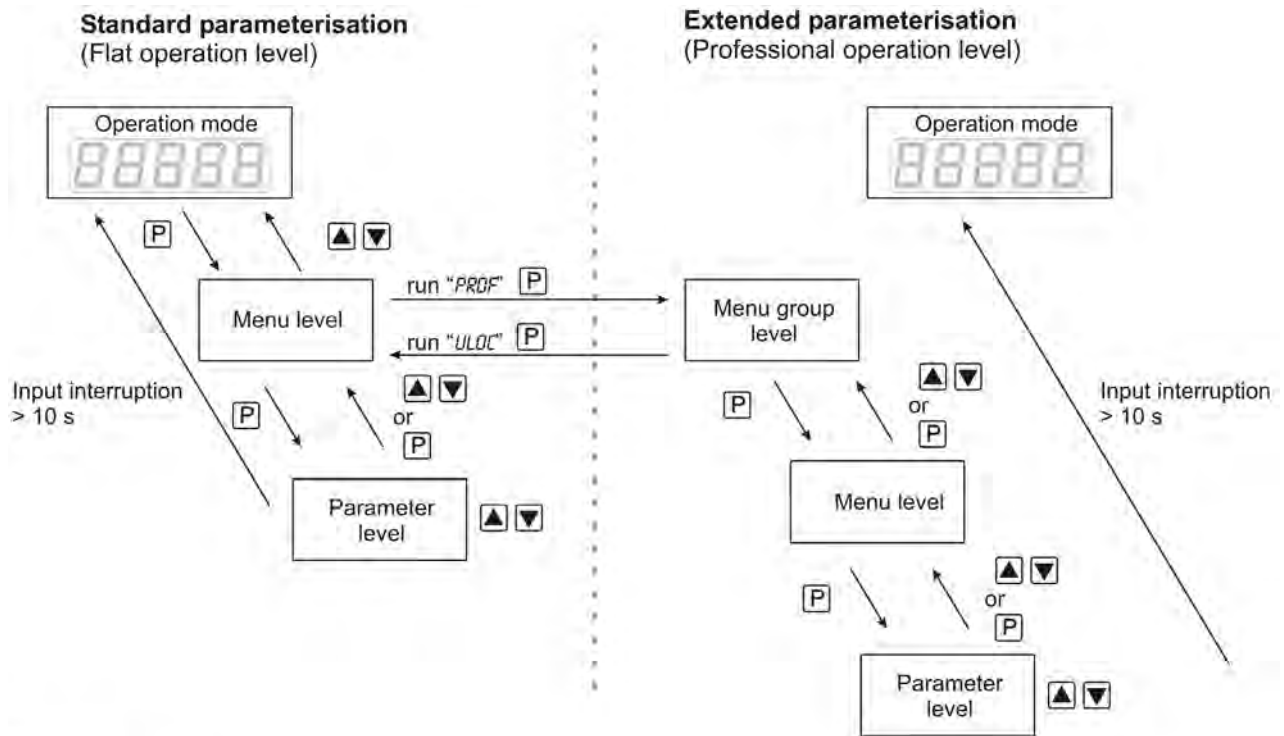

**Explanation:**

- P** Take-over
- ▲ ▼** Breakoff by simultaneously pushing of the navigation keys
- ▲** Value selection (+)
- ▼** Value selection (-)

**4.1 Parameterisation software PM-TOOL:**

Part of the PM-TOOL are the software on CD and an USB-cable with device adapter. The connection is done via a 4-pole micromatch-plug on the back side of the device, to the PC-side the connection ist done via an USB plug.

System requirements: PC incl. USB interface

Software: Windows XP, Windows VISTA

With this tool the device configuration can be generated, omitted and safed on the PC. The parameters can be changed via the easy to handle program surface, whereat the operating mode and the possible selection options can be preset by the program.



## 5. Setting up the device

### 5.1. Switching on



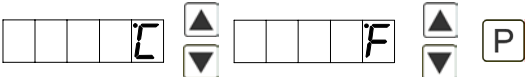
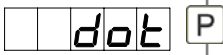





Once the installation is complete, you can start the device by applying the voltage supply. Before, check once again that all electrical connections are correct.





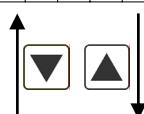

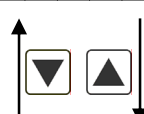


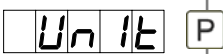


#### Starting sequence


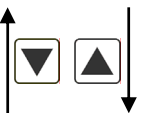

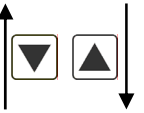
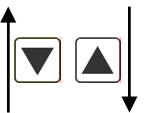
For 1 second during the switching-on process, the segment test (**8 8 8 8 8**) is displayed followed by an indication of the software type and, after that, also for 1 second the software version. After the starting sequence, the device switches to operation/display mode.



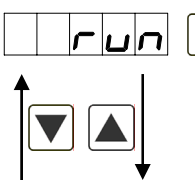
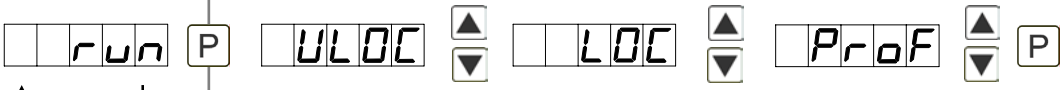
### 5.2. Standard parameterisation: (Flat operation level)

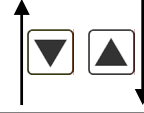To parameterize the display, press the **[P]** key in operating mode for 1 second. The display then changes to the menu level with the first menu item **TYPE**.

| Menu level   | Parameterisation level  |
|--|---|
| <br>    | <p><b>Type of temperature metering, UNIT:</b><br/>Default: °C</p> <br><p>The temperature can be displayed in °C or in °F. Confirm the selection with <b>[P]</b> and the display switches back to menu level.</p>   |
| <br> | <p><b>Setting the decimal point, DOT:</b><br/>Default: 0.0</p> <br><p>The decimal point on the display and the physical unit can be changed with <b>[▲]</b> <b>[▼]</b>. If e.g. temperature measurement in °C is selected, then you can choose between 0°C and 0.0°C in the parameterisation level. Confirm with <b>[P]</b>, the display then switches back to the menu level again.</p>  |
| <br> | <p><b>Setting the measuring range start/offset value, OFFS:</b><br/>Default: 0.0</p> <br><p>Enter the start/offset value from the smallest to the highest digit <b>[▲]</b> <b>[▼]</b> and confirm each digit with <b>[P]</b>. After the last digit the display switches back to the menu level. If <b>SENS</b> was selected as the input option, you can only select between <b>NOCA</b> and <b>CAL</b>. With <b>NOCA</b>, only the previously set display value is taken over, and with <b>CAL</b>, the device takes over both the display value and the analogue input value.</p> |


| Menu level  | Parameterisation level   |
|---|--|
|    | <p><b>Setting the display time, SEC:</b><br/>Default: 1.0</p> <p>  </p> <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 up to 1 second and in increments of 1.0 to 10.0 seconds. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>  |
|    | <p><b>Selection of analog output, OUT.RA:</b><br/>Default: 4-20</p> <p>  </p> <p>Three output signals are available: 0-10 VDC, 0-20 mA and 4-20 mA, with this function, the demanded signal is selected.</p>   |
|  | <p><b>Setting up the final value of the analog output, OUT.EN:</b><br/>Default: 850.0</p> <p>  </p> <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>       |
|  | <p><b>Setting up the initial value of the analog output, OUT.OF:</b><br/>Default: -200.0</p> <p>  </p> <p>The initial value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p> |
|  | <p><b>Threshold values / Limits, LI-1:</b><br/>Default: 200.0</p> <p>  </p> <p>This value defines the threshold, that activates/deactivates an alarm.</p>  |
|  | <p><b>Hysteresis for limit values, HY-1:</b><br/>Default: 0.0</p> <p>  </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>   |

| Menu level  | Parameterisation level  |
|---|---|
|    | <p><b>Function for threshold value undercut /exceedance, FU-1:</b><br/>Default: <i>HIGH</i></p> <p><b>FU-1</b> P <b>H I G H</b> ▲ ▼ <b>L O W W</b> ▲ ▼ P</p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p> |
|    | <p><b>Threshold values /Limits, LI-2:</b><br/>Default: <i>300.0</i></p> <p><b>LI-2</b> P <b>0</b> P <b>0</b> P <b>0</b> P <b>0</b> P <b>0</b> ▲ ▼ P</p> <p>This value defines the threshold, that activates/deactivates an alarm.</p>   |
|  | <p><b>Hysteresis for threshold values, HY-2:</b><br/>Default: <i>0.0</i></p> <p><b>HY-2</b> P <b>0</b> P <b>0</b> P <b>0</b> P <b>0</b> P <b>0</b> ▲ ▼ P</p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>   |
|  | <p><b>Function if display falls below / exceeds limit value, FU-2:</b><br/>Default: <i>HIGH</i></p> <p><b>FU-2</b> P <b>H I G H</b> ▲ ▼ <b>L O W W</b> ▲ ▼ P</p> <p>To indicate if the value falls below the lower limit value, <i>LOW</i> can be selected (LOW = lower limit value) and if it goes above the upper limit value, <i>HIGH</i> can be selected (HIGH = upper limit value). LOW corresponds to the quiescent current principle and HIGH to the operating current principle.</p>  |
|  | <p><b>User code (4-digit number-combination, free available), U.CODE:</b><br/>Default: <i>0000</i></p> <p><b>U.CoDE</b> P <b>0</b> P <b>0</b> P <b>0</b> P <b>0</b> ▲ ▼ P</p> <p>If this code was set (&gt;0000), all parameters are locked for the user, if <i>LOC</i> has been selected before under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i>. The <i>U.CODE</i> needs to be entered to get to the reduced number of parameter sets. The code has to be entered before each parameterisation, until the <i>R.CODE</i> (Master code) unlocks all parameters again.</p>             |
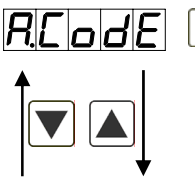
| Menu level   | Parameterisation level  |
|--|---|
|   | <p><b>Master code (4-digit number-combination, free available), <i>R.CODE</i>:</b><br/>Default: 1234</p>  <p>All parameters can be unlocked with this code, after <i>LOC</i> has been activated under menu item <i>RUN</i>. By pressing <b>[P]</b> for 3 seconds in operation mode, the display shows <i>CODE</i> and enables the user to reach all parameters by entering the <i>R.CODE</i>. Under <i>RUN</i> the parameterisation can be activated permanently by selecting <i>ULOC</i> or <i>PROF</i>, thus at an anew pushing of <b>[P]</b> in operation mode, the code needs not to be entered again.</p>   |
| <p><b>5.3. Programming interlock „<i>RUN</i>“</b></p>                              |   |
|  | <p><b>Activation / deactivation of the programming lock or completion of the standard parameterization with change into menu group level (complete function range), <i>RUN</i>:</b><br/>Default: <i>ULOC</i></p>  <p>With the navigation keys <b>[▲]</b> <b>[▼]</b>, you can choose between the deactivated key lock <i>ULOC</i> (works setting) and the activated key lock <i>LOC</i>, or the change into the menu group level <i>PROF</i>. Confirm the selection with <b>[P]</b>. After this, the display confirms the settings with "- - - -", and automatically switches to operating mode. If <i>LOC</i> was selected, the keyboard is locked. To get back into the menu level, press <b>[P]</b> for 3 seconds in operating mode. Now enter the <i>CODE</i> (works setting 1 2 3 4) that appears using <b>[▲]</b> <b>[▼]</b> plus <b>[P]</b> to unlock the keyboard. <i>FAIL</i> appears if the input is wrong. To parameterize further functions <i>PROF</i> needs to be set. The device confirms this setting with „- - - -“, and changes automatically in operation mode. By pressing <b>[P]</b> for approx. 3 seconds in operation mode, the first menu group <i>INP</i> is shown in the display and thus confirms the change into the extended parameterisation. It stays activated as long as <i>ULOC</i> or <i>LOC</i> is entered in menu group <i>RUN</i>.</p> |

## 5.4. Extended parameterisation (Professional operation level)


### 5.4.1. Signal input parameters

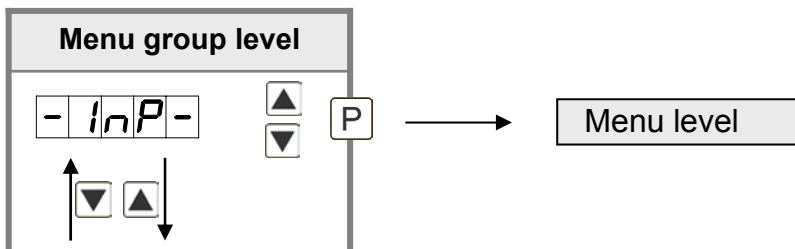


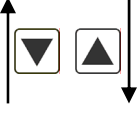


| Menu level | Parameterisation level   |
|------------|--|
|            | <p><b>Type of temperature metering, UNIT:</b><br/>Default: °C</p> <p>The temperature can be displayed in °C or in °F. Confirm the selection with [P] and the display switches back to menu level.</p>  |
|            | <p><b>Setting the decimal point, DOT:</b><br/>Default: 0.0</p> <p>The decimal point on the display and the physical unit can be changed with [▲] [▼]. If e.g. temperature measurement in °C is selected, then you can choose between 0°C and 0.0°C in the parameterisation level. Confirm with [P], the display then switches back to the menu level again.</p>  |
|            | <p><b>Setting the measuring range start/offset value, OFFS:</b><br/>Default: 0.0</p> <p>Enter the start/offset value from the smallest to the highest digit [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS</i> was selected as the input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p> |
|            | <p><b>Device undercut, DI.UND:</b><br/>Default: -19999</p> <p>With this function the device undercut (_____) can be defined on a definite value. Exception is input type <b>4-20 mA</b>, it already shows undercut at a signal &lt;1 mA, so a sensor failure is marked.</p>  |

| Menu level | Parameterisation level   |
|------------|--|
|            | <p><b>Display overflow, <i>DI.OUE</i>:</b><br/>Default: 99999</p> <p>With this function the display overflow (-----) can be defined on a definite value.</p> |
|            | <p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-IMP-“.</p>         |

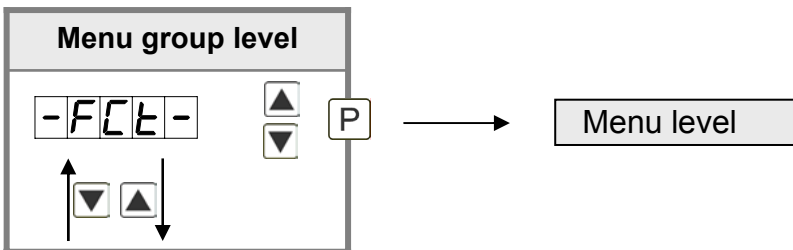
### 5.4.2. General device parameters



| Menu level | Parameterisation level  |
|------------|---|
|            | <p><b>Display time, <i>DISEC</i>:</b><br/>Default: 01.0</p> <p>The display is set up with [▲] [▼]. Thereby it switches until 1 second in increments of 0.1 seconds and until 10.0 seconds in increments of 1.0. With [P] the selection is confirmed and the device changes into menu level.</p>   |
|            | <p><b>Rounding of display values, <i>ROUND</i>:</b><br/>Default: 00001</p> <p>This function is for instable display values, where the display value is changed in increments of 1-, 5-, 10- or 50. This does not affect the resolution of the optional outputs. With [P] the selection is confirmed and the device changes into menu level.</p> |
|            | <p><b>Display, <i>DISPL</i>:</b><br/>Default: ACTUA</p> <p>With this function the current measuring value or the min-value/max-value. With [P] the selection is confirmed and the device changes into menu level.</p>   |


| Menu level  | Parameterisation level  |
|---|---|
|    | <p><b>Brightness control, LIGHT:</b><br/>Default: 15</p> <p>L I G H T P    00 ▲ ▼    15 ▲ ▼ P</p> <p>The brightness of the display can be adjusted in 16 levels from 00 = very dark to 15 = very bright via this parameter or alternatively via the navigation keys from the outside. During the start of the device the level that is deposited under this parameter will always be used, even though the brightness has been changed via the navigation keys in the meantime.</p>   |
|    | <p><b>Display flashing, FLASH:</b><br/>Default: NO</p> <p>FLASH P    no ▲ ▼    AL-1 ▲ ▼    AL-2 ▲ ▼    AL.12 ▲ ▼</p> <p>AL-3 ▲ ▼    AL-4 ▲ ▼    AL.34 ▲ ▼    ALAL P</p> <p>A display flashing can be added as additional alarm function either to single or to a combination of off-limit condition. With <i>NO</i>, no flashing is allocated.</p>  |
|  | <p><b>Assignment (deposit) of key functions, TAST:</b><br/>Default: NO</p> <p>TAST P    EHTR ▲ ▼    LI.12 ▲ ▼    LI.34 ▲ ▼    EHTR E ▲ ▼</p> <p>ACTUA ▲ ▼    no ▲ ▼ P</p> <p>For the operation mode, special functions can be deposited on the navigation keys [▲] [▼], in particular this function is made for devices in housing size 48x24 which do not have a 4th key ([O]-key). If the min/max-memory is activated with <i>EHTR</i>, all measured min/max-values are safed during operation and can be recalled via the navigation keys. The values get lost by re-start of the device. If the threshold value correction <i>LI.12</i> or <i>LI.34</i> is choosen, the values of the threshold can be changed during operation without disturbing the operating procedure. If <i>NO</i> is selected, the navigation keys are without function in the operation mode.</p> |
|  | <p><b>Back to menu group level, RET:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „- FCT -“.</p>   |

### 5.4.3. Safety parameters

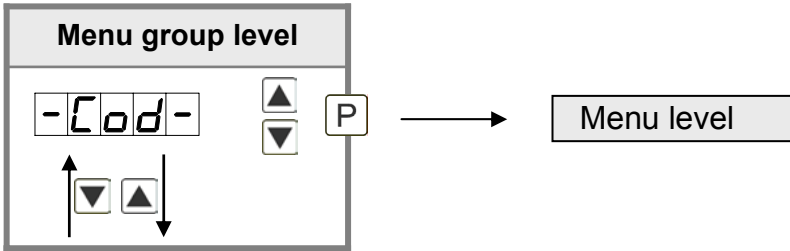





| Menu level | Parameterisation level   |
|------------|--|
|            | <p><b>User code <i>U.CODE</i>:</b><br/>Default: 0000</p> <p>U.CodE P 0 P 0 P 0 P 0 P 0 P</p> <p>Via this code, reduced sets of parameters can be set free. A change of the <i>U.CODE</i> can be done via the correct input of the <i>R.CODE</i> (master code).</p>   |
|            | <p><b>Master code, <i>R.CODE</i>:</b><br/>Default: 1234</p> <p>R.Code P 1 P 2 P 3 P 4 P</p> <p>By entering <i>R.CODE</i> the device will be unlocked and all parameters are released.</p>  |
|            | <p><b>Release/lock analog output parameter, <i>OUT.LE</i>:</b><br/>Default: ALL</p> <p>OUT.LE P no EN-OF OUT.EO ALL P</p> <p>Analog output parameters can be locked or released for the user:</p> <ul style="list-style-type: none"> <li>- At <i>EN-OF</i> the initial or final value can be changed in operation mode.</li> <li>- At <i>OUT.EO</i> the output signal can be changed from e.g. 0-20 mA to 4-20 mA or 0-10 VDC.</li> <li>- At <i>ALL</i> analog output parameters are released.</li> <li>- At <i>NO</i> all analog output parameters are locked.</li> </ul> |
|            | <p><b>Release/lock alarm parameters, <i>AL.LEU</i>:</b><br/>Default: ALL</p> <p>AL.LEU P no LIMIT ALRNL ALL P</p> <p>This parameter describes the user release/user lock of the alarm.</p> <ul style="list-style-type: none"> <li>- <i>LIMIT</i>, here only the range of value of the threshold values 1-4 can be changed.</li> <li>- <i>ALRNL</i>, here the range of value and the alarm trigger can be changed.</li> <li>- <i>ALL</i>, all alarm parameters are released.</li> <li>- <i>NO</i>, all alarm parameters are locked.</li> </ul>                              |



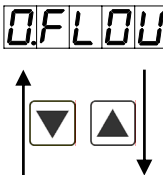

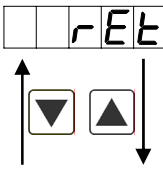

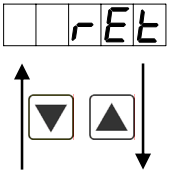
| Menu level  | Parameterisation level  |
|---|---|
|  | <p>Back to menu group level, <i>RET</i>:</p> <p>With [<b>P</b>] the selection is confirmed and the device changes into menu group level „- <i>COO</i> -“.</p> |


#### 5.4.4. Analog output parameters

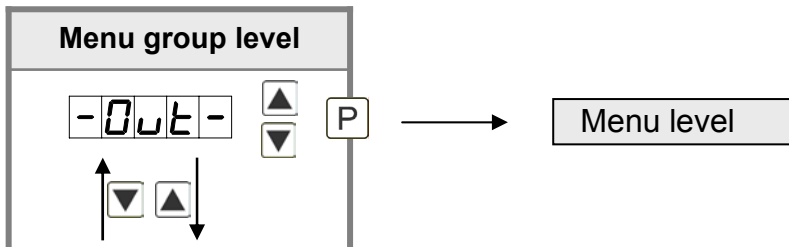
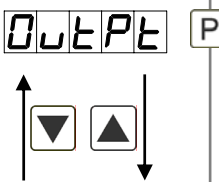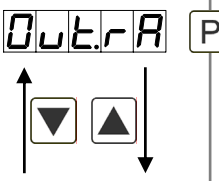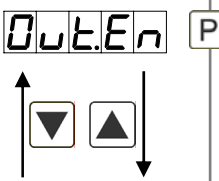
| Menu level  | Parameterisation level   |
|---|--|
|  | <p>Selection reference analog output, <i>OUTPT</i>:<br/>Default: <i>ACTUA</i></p> <p><i>ACTUA</i> ▲ <i>MINUA</i> ▲ <i>MAXUA</i> ▲ P</p> <p>The analog output signal can refer to different functions, in detail this are the current measuring value, min-value or max-value. With [<b>P</b>] the selection is confirmed and the device changes into menu level.</p>   |
|  | <p>Selection analog output, <i>OUT.RA</i>:<br/>Default: <i>4-20</i></p> <p><i>0-10</i> ▲ <i>0-20</i> ▲ <i>4-20</i> ▲ P</p> <p>There are 3 output signals available: 0-10 VDC, 0-20 mA and 4-20 mA. With this function the demanded signal can be selected.</p>   |
|  | <p>Setting up the final value of the analog output, <i>OUT.EN</i>:<br/>Default: <i>850.0</i></p> <p><i>8</i> P <i>8</i> P <i>8</i> P <i>8</i> P <i>8</i> ▲ P</p> <p>The final value can be adjusted from the smallest to the largest digit with [<b>▲</b>] [<b>▼</b>]. Confirm each digit with [<b>P</b>]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level.</p> |
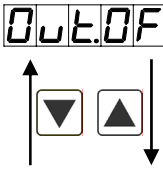
| Menu level  | Parameterisation level   |
|---|--|
|    | <p><b>Setting the initial value of the analog output, <i>OUT.DF</i>:</b><br/>Default: <i>-200.0</i></p>  <p>The initial value is adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be parameterized on the highest digit. After the last digit the device changes back into menu level.</p>   |
|    | <p><b>Overflow behaviour, <i>O.FLOW</i>:</b><br/>Default: <i>EDGE</i></p>  <p>To recognise and evaluate faulty signals, e.g. by a controller, the overflow behaviour of the analog output can be defined. As overflow can be seen either <i>EDGE</i>, that means the analog output runs on the set limits e.g. 4 and 20 mA, or <i>TO.OFF</i> (input value smaller than initial value, analog output switches on e.g. 4 mA), <i>TO.END</i> (higher than final value, analog output switches on e.g. 20 mA). If <i>TO.MIN</i> or <i>TO.MAX</i> is set, the analog output switches on the smallest or highest possible binary value. This means that values of e.g. 0 mA, 0 VDC or values higher than 20 mA or 10 VDC can be reached. With [P] the selection is confirmed and the device changes into menu level.</p> |
|  | <p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „- OUT -“.</p>   |


### 5.4.5. Relay functions

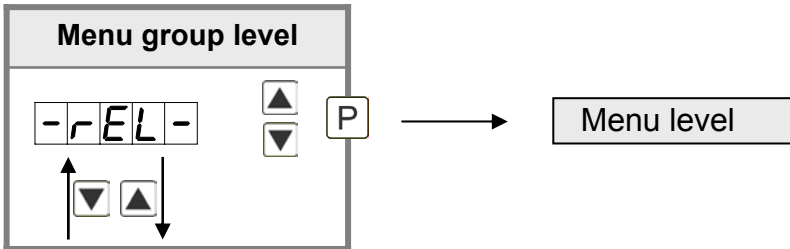



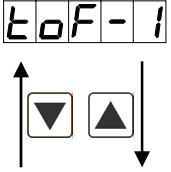


| Menu level                       | Parameterisation level  |   |              |   |            |  |  |            |                |   |             |  |   |
|----------------------------------|---|---|--------------|---|------------|--|--|------------|----------------|---|-------------|--|---|
| <p><b>REL-1</b> P</p> <p>↑ ↓</p> | <p><b>Alarm relay 1, REL-1:</b><br/>Default: <i>AL-1</i></p> <p><b>AL-1</b> .... <b>AL-4</b> ▲ ▼ <b>AL-n1</b> .... <b>AL-n4</b> ▲ ▼</p> <p><b>LOGIC</b> ▲ ▼ <b>OFF</b> ▲ ▼ <b>On</b> ▲ ▼ P</p> <p>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL-1/4</i> or de-activated alarms <i>ALn1/4</i>. If <i>LOGIC</i> is selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. One can only get to these two menu levels via <i>LOGIC</i>, at all other selected functions, these two parameters are overlapped. Via <i>ON/OFF</i> the setpoints can be activated/de-activated, in this case the output and the setpoint display are set/not set on the front of the device. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>   |   |              |   |            |  |  |            |                |   |             |  |   |
| <p><b>LOG-1</b> P</p> <p>↑ ↓</p> | <p><b>Logic relay 1, LOG-1</b><br/>Default: <i>OR</i></p> <p><b>or</b> ▲ ▼ <b>nor</b> ▲ ▼ <b>And</b> ▲ ▼ <b>nAnd</b> ▲ ▼ P</p> <p>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>. This parameter can only be selected if <i>LOGIC</i> was selected under <i>REL-1</i>.</p> <table border="1" data-bbox="336 1411 1498 1742"> <tbody> <tr> <td data-bbox="336 1411 523 1491"><b>or</b></td> <td data-bbox="523 1411 826 1491"><math>A1 \vee A2</math></td> <td data-bbox="826 1411 1498 1491">As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td data-bbox="336 1491 523 1572"><b>nor</b></td> <td data-bbox="523 1491 826 1572"><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></td> <td data-bbox="826 1491 1498 1572">The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td data-bbox="336 1572 523 1653"><b>And</b></td> <td data-bbox="523 1572 826 1653"><math>A1 \wedge A2</math></td> <td data-bbox="826 1572 1498 1653">The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td data-bbox="336 1653 523 1742"><b>nAnd</b></td> <td data-bbox="523 1653 826 1742"><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></td> <td data-bbox="826 1653 1498 1742">As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p> | <b>or</b>   | $A1 \vee A2$ | As soon as a selected alarm is activated, the relay operates. Equates to operating current principle. | <b>nor</b> | $\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$ | The relay operates only, if no selected alarm is active. Equates to quiescent current principle. | <b>And</b> | $A1 \wedge A2$ | The relay operates only, if all selected alarms are active. | <b>nAnd</b> | $\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$ | As soon as a selected alarm is not activated, the relay operates. |
| <b>or</b>                        | $A1 \vee A2$  | As soon as a selected alarm is activated, the relay operates. Equates to operating current principle. |              |   |            |  |  |            |                |   |             |  |   |
| <b>nor</b>                       | $\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$  | The relay operates only, if no selected alarm is active. Equates to quiescent current principle.      |              |   |            |  |  |            |                |   |             |  |   |
| <b>And</b>                       | $A1 \wedge A2$  | The relay operates only, if all selected alarms are active.   |              |   |            |  |  |            |                |   |             |  |   |
| <b>nAnd</b>                      | $\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$  | As soon as a selected alarm is not activated, the relay operates.                                     |              |   |            |  |  |            |                |   |             |  |   |
| <p><b>COM-1</b> P</p> <p>↑ ↓</p> | <p><b>Alarms for relay 1, COM-1:</b><br/>Default: <i>A.1</i></p> <p><b>A.1</b> ▲ ▼ <b>A.2</b> ▲ ▼ .... <b>A.1234</b> ▲ ▼ P</p> <p>The allocation of the alarms to relay 1 happens via this parameter, one alarm or a group of alarms can be chosen. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>  |   |              |   |            |  |  |            |                |   |             |  |   |

| Menu level                       | Parameterisation level   |   |              |   |     |  |  |     |                |   |      |  |   |
|----------------------------------|--|---|--------------|---|-----|--|--|-----|----------------|---|------|--|---|
| <p><b>REL-2</b> P</p> <p>↑ ↓</p> | <p><b>Alarm relay 2, REL-2:</b><br/>Default: <i>AL-2</i></p> <p>AL-1 ..... AL-4 ▲ ▼ AL-n1 ..... AL-n4 ▲ ▼</p> <p>LOGIC ▲ ▼ OFF ▲ ▼ On P</p> <p>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL-1/4</i> or de-activated alarms <i>ALn1/4</i>. If <i>LOGIC</i> is selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. One can only get to these two menu levels via <i>LOGIC</i>, at all other selected functions, these two parameters are overleaped. Via <i>ON/OFF</i> the setpoints can be activated/de-activated, in this case the output and the setpoint display are set/not set on the front of the device. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>   |   |              |   |     |  |  |     |                |   |      |  |   |
| <p><b>LOG-2</b> P</p> <p>↑ ↓</p> | <p><b>Logic relay 2, LOG-2:</b><br/>Default: <i>OR</i></p> <p>or ▲ ▼ nor ▲ ▼ And ▲ ▼ nAnd ▲ ▼ P</p> <p>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>. This parameter can only be selected if <i>LOGIC</i> was selected under <i>REL-1</i>.</p> <table border="1" data-bbox="336 1115 1498 1444"> <tbody> <tr> <td data-bbox="336 1115 523 1198">or</td> <td data-bbox="523 1115 826 1198"><math>A1 \vee A2</math></td> <td data-bbox="826 1115 1498 1198">As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td data-bbox="336 1198 523 1281">nor</td> <td data-bbox="523 1198 826 1281"><math>\overline{A1 \vee A2} = \bar{A1} \wedge \bar{A2}</math></td> <td data-bbox="826 1198 1498 1281">The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td data-bbox="336 1281 523 1364">And</td> <td data-bbox="523 1281 826 1364"><math>A1 \wedge A2</math></td> <td data-bbox="826 1281 1498 1364">The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td data-bbox="336 1364 523 1444">nAnd</td> <td data-bbox="523 1364 826 1444"><math>\overline{A1 \wedge A2} = \bar{A1} \vee \bar{A2}</math></td> <td data-bbox="826 1364 1498 1444">As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p> | or  | $A1 \vee A2$ | As soon as a selected alarm is activated, the relay operates. Equates to operating current principle. | nor | $\overline{A1 \vee A2} = \bar{A1} \wedge \bar{A2}$ | The relay operates only, if no selected alarm is active. Equates to quiescent current principle. | And | $A1 \wedge A2$ | The relay operates only, if all selected alarms are active. | nAnd | $\overline{A1 \wedge A2} = \bar{A1} \vee \bar{A2}$ | As soon as a selected alarm is not activated, the relay operates. |
| or                               | $A1 \vee A2$   | As soon as a selected alarm is activated, the relay operates. Equates to operating current principle. |              |   |     |  |  |     |                |   |      |  |   |
| nor                              | $\overline{A1 \vee A2} = \bar{A1} \wedge \bar{A2}$   | The relay operates only, if no selected alarm is active. Equates to quiescent current principle.      |              |   |     |  |  |     |                |   |      |  |   |
| And                              | $A1 \wedge A2$   | The relay operates only, if all selected alarms are active.   |              |   |     |  |  |     |                |   |      |  |   |
| nAnd                             | $\overline{A1 \wedge A2} = \bar{A1} \vee \bar{A2}$   | As soon as a selected alarm is not activated, the relay operates.                                     |              |   |     |  |  |     |                |   |      |  |   |
| <p><b>COM-2</b> P</p> <p>↑ ↓</p> | <p><b>Alarms for relay 2, COM-2:</b><br/>Default: <i>A. 2</i></p> <p>A.1 ▲ ▼ A.2 ▲ ▼ ..... A.1234 ▲ ▼ P</p> <p>The allocation of the alarms to relay 5 happens via this parameter, one alarm or a group of alarms can be chosen. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>  |   |              |   |     |  |  |     |                |   |      |  |   |
| <p><b>RET</b></p> <p>↑ ↓</p>     | <p><b>Back to menu group level, RET:</b></p> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „- REL -“.</p>   |   |              |   |     |  |  |     |                |   |      |  |   |

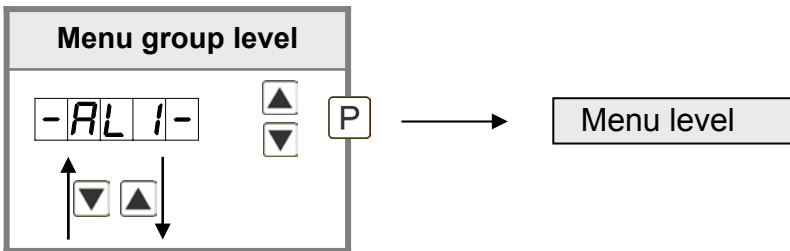
## 5.4.6. Alarm parameters

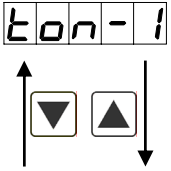

| Menu level | Parameterization level   |
|------------|--|
|            | <p><b>Dependency alarm1, ALRM.1:</b><br/>Default: <i>ACTUA</i></p> <p>The dependency of alarm1 can be related to special functions, in detail these are the current measurand, the min-value or the max-value. <i>ENTER</i> causes the dependency either by pressing the [O]-key on the front of the housing or by an external signal via the digital input. With [P] the selection is confirmed and the device changes into menu level.</p> <p><b>Example:</b><br/>By using the maximum value <i>ALARM.1 = MAX.VA</i> in combination with a threshold monitoring <i>FU-1 = HIGH</i>, an alarm confirmation can be realised. Use the digital input for confirmation.</p> |
|            | <p><b>Threshold values / Limit values, LI-1:</b><br/>Default: <i>200.0</i></p> <p>The limit value defines the threshold, that activates/deactivates an alarm.</p>  |
|            | <p><b>Hysteresis for threshold values, HY-1:</b><br/>Default: <i>0.0</i></p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>  |
|            | <p><b>Function for threshold value undercut /exceedance, FU-1:</b><br/>Default: <i>HIGH</i></p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>   |

| Menu level   | Parameterization level   |
|--|--|
|   | <p><b>Switching-on delay, <i>TON-1</i>:</b><br/>Default: <i>000</i></p>  <p>For limit value 1 one can preset a delayed switching-on of 0-100 seconds.</p>   |
|   | <p><b>Switching-off delay, <i>TOF-1</i>:</b><br/>Default: <i>000</i></p>  <p>For limit value 1 one can preset a delayed switching-off of 0-100 seconds.</p> |
|  | <p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „- <i>AL1</i> -“.</p>   |

**The same applies to -AL2- to -AL4-.**

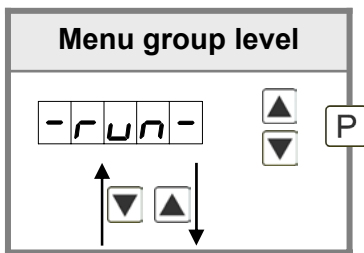**Programming interlock, *RUN*:**

Description see page 10, menu level *RUN*

**6. Reset to factory settings**

To return the unit to a **defined basic state**, a reset can be carried out to the default values.

The following procedure should be used:

- Switch off the power supply
- Press button **[P]**
- Switch on voltage supply and press **[P]**-button until „- - - -“ is shown in the display.


With reset, the default values of the program table are loaded and used for subsequent operation. This sets the unit back to the state in which it was supplied.

**Caution! All application-related data are lost.**

## 7. Alarms / Relays


This device has 4 virtual alarms that can monitor one limit value in regard of an undercut or exceedance. Each alarm can be allocated to an optional relay output S1-S2; furthermore alarms can be controlled by events like e.g. min-/max-value.

| Function principle of alarms / relays |  |
|---------------------------------------|--|
| Alarm / Relay x                       | Deactivated, instantaneous value, min-/max-value         |
| Switching threshold                   | Threshold / limit value of the change-over               |
| Hysteresis                            | Broadness of the window between the switching thresholds |
| Working principle                     | Operating current / Quiescent current                    |

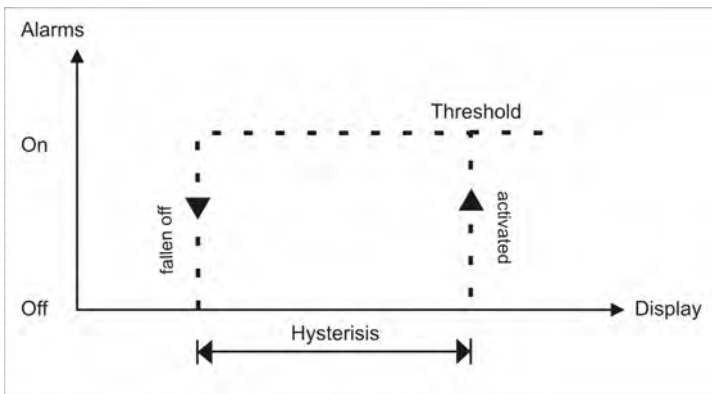


### Operating current

By operating current the alarm S1-S2 is off below the threshold and “on” on reaching the threshold.

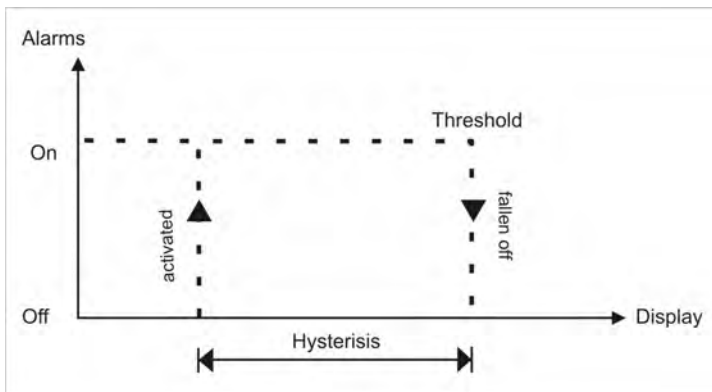

### Quiescent current

By quiescent current the alarm S1-S2 is on below the threshold and switched “off” on reaching the threshold.

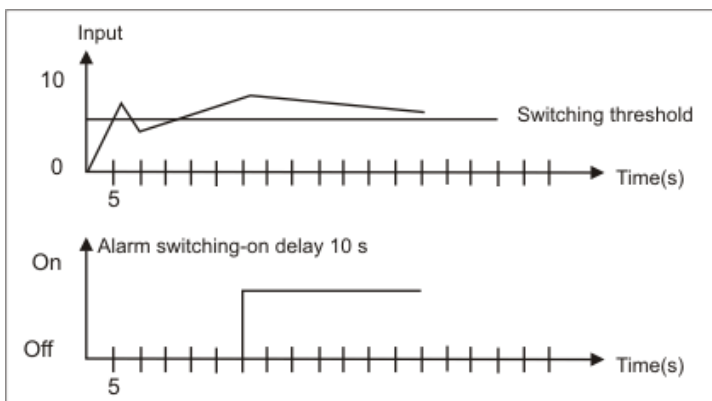

### Switching-on delay

The switching-on delay is activated via an alarm and e.g. switched 10 seconds after reaching the switching threshold, a short-term exceedance of the switching value does not cause an alarm, respectively does not cause a switching operation of the relay. The switching-off delay operates in the same way, keeps the alarm / the relay switched longer for the parameterised time.



## 8. Technical data

| <b>Housing</b>      |  |                          |              |
|---------------------|--|--------------------------|--------------|
| <b>Dimensions</b>   | 48x24x90 mm (BxHxD)  |                          |              |
|                     | 48x24x109 mm (BxHxD) incl. plug-in terminal  |                          |              |
| Panel cut-out       | 45.0 <sup>+0.6</sup> x 22.2 <sup>+0.3</sup> mm   |                          |              |
| Wall thickness      | up to 3 mm   |                          |              |
| Fixing              | screw elements   |                          |              |
| Material            | PC Polycarbonate, black, UL94V-0   |                          |              |
| Sealing material    | EPDM, 65 Shore, black  |                          |              |
| Protection class    | standard IP65 (Front side), IP00 (Back side)   |                          |              |
| Weight              | approx. 200 g  |                          |              |
| Connection          | plug-in terminal; wire cross section up to 2.5 mm <sup>2</sup>                           |                          |              |
| <b>Display</b>      |  |                          |              |
| Digit height        | 10 mm  |                          |              |
| Segment colour      | Red (optional green, yellow or blue)   |                          |              |
| Range of display    | -19999 to 99999  |                          |              |
| Setpoints           | one LED per setpoint   |                          |              |
| Overflow            | horizontal bars at the top   |                          |              |
| Underflow           | horizontal bars at the bottom  |                          |              |
| Display time        | 0.1 to 10.0 seconds  |                          |              |
| <b>Input</b>        | <b>Measuring range</b>   | <b>Measuring error</b>   | <b>Digit</b> |
| Pt100 2-/3-/4-wire  | -200.0...850.0°C   | 0.1 % of measuring range | ±1           |
| Pt100 2-/3-/4-wire  | -328.0...1562.0°F  | 0.1 % of measuring range | ±1           |
| <b>Accuracy</b>     |  |                          |              |
| Temperature drift   | 100 ppm / K  |                          |              |
| Measuring time      | 0.1...10.0 seconds   |                          |              |
| Measuring principle | U/F-conversion   |                          |              |
| Resolution          | 0.1°C or 0.1°F   |                          |              |
| <b>Output</b>       |  |                          |              |
| Sensor supply       | 24 VDC / 50 mA; 10 VDC / 20 mA   |                          |              |
| Analog output       | 0/4-20 mA or 0-10 VDC 16 Bit switchable  |                          |              |
| Switching outputs   | 2 PhotoMos (Closer)  | 30 VDC/ADC, 0.4 A        |              |
| Power pack          | 100-240 VAC 50/60 Hz / DC ± 10% (max. 5 VA)<br>24 VDC ± 10 % galv. insulated (max. 4 VA) |                          |              |
| <b>Memory</b>       |  |                          |              |
| Data life           | ≥ 100 years at 25°C  |                          |              |

|                           |   |
|---------------------------|---|
| <b>Ambient conditions</b> |   |
| Working temperature       | 0...50°C  |
| Storing temperature       | -20...80°C  |
| Weathering resistance     | 0-80% relative humidity on years average without dew                  |
|                           |   |
| <b>EMV</b>                | EN 61326  |
|                           |   |
| <b>CE-sign</b>            | Conformity according to directive 2004/108/EG                         |
|                           |   |
| <b>Safety standard</b>    | According to low voltage directive 2006/95/EG<br>EN 61010; EN 60664-1 |

## 9. Safety advices

Please read the following safety advices and the assembly in *chapter 2* before installation and keep it for future reference.

### Proper use

The **M3-7C-device** is designed for the evaluation and display of sensor signals.



**Danger!** Careless use or improper operation can result in personal injury and/or damage to the equipment.

### Control of the device

The panel meters are checked before dispatch and sent out in perfect condition. Should there be any visible damage, we recommend close examination of the packaging. Please inform the supplier immediately of any damage.


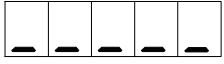
### Installation

The **M3-7C-device** must be installed by a suitably **qualified specialist** (e.g. with a qualification in industrial electronics).

### Notes on installation

- There must be no magnetic or electric fields in the vicinity of the device, e.g. due to transformers, mobile phones or electrostatic discharge.
- The **fuse rating** of the supply voltage should not exceed a value of **6A N.B. fuse**.
- Do not install **inductive consumers** (relays, solenoid valves etc.) near the device and **suppress** any interference with the aid of RC spark extinguishing combinations or free-wheeling diodes.
- Keep input, output and supply lines separate from one another and do not lay them parallel with each other. Position “go” and “return lines” next to one another. Where possible use twisted pair. So, you receive best measuring results.
- Screen off and twist sensor lines. Do not lay current-carrying lines in the vicinity. Connect the **screening on one side** on a suitable potential equaliser (normally signal ground).
- The device is not suitable for installation in areas where there is a risk of explosion.
- Any electrical connection deviating from the connection diagram can endanger human life and/or can destroy the equipment.
- The terminal area of the device is part of the service. Here electrostatic discharge needs to be avoided. Attention! High voltages can cause dangerous body currents.
- Galvanic insulated potentials within one complex need to be placed on an appropriate point (normally earth or machines ground). So, a lower disturbance sensibility against impacted energy can be reached and dangerous potentials, that can occur on long lines or due to faulty wiring, can be avoided.

## 10. Error elimination

|    | Error description   | Measures   |
|----|---|--|
| 1. | The unit permanently indicates overflow.<br> | <ul style="list-style-type: none"> <li>The input has a very high measurement, check the measuring circuit.</li> <li>The input is open.</li> </ul>  |
| 2. | The unit permanently shows underflow.<br>    | <ul style="list-style-type: none"> <li>The input has a very low measurement, check the measuring circuit .</li> <li>The input is open.</li> </ul>  |
| 3. | The word " <b>HELP</b> " lights up in the 7-segment display.  | <ul style="list-style-type: none"> <li>The unit has found an error in the configuration memory. Perform a reset on the default values and re-configure the unit according to your application.</li> </ul>        |
| 4. | Program numbers for parameterising of the input are not accessible.   | <ul style="list-style-type: none"> <li>Programming lock is activated</li> <li>Enter correct code</li> </ul>  |
| 5. | " <b>ERR1</b> " lights up in the 7-segment display  | <ul style="list-style-type: none"> <li>Please contact the manufacturer if errors of this kind occur.</li> </ul>  |
| 6. | The device does not react as expected.  | <ul style="list-style-type: none"> <li>If you are not sure if the device has been parameterised before, then follow the steps as written in <i>chapter 6</i>. and set it back to its delivery status.</li> </ul> |