
User manual M3

Direct voltage signals shunt 0-60/150/100 mV



Technical features:

- red display of -19999...99999 Digits (optional: green, orange or blue display)
- minimal installation depth: 90 mm without plug-in screw terminal
- min-/max-memory
- 30 additional adjustable supporting points
- display flashing at threshold exceedance/ threshold undercut
- navigation keys for actuation of Hold, Tara
- permanent min/max-value recording
- volume metering (totaliser)
- mathematic functions like reciprocal value, square root, squaring or rounding
- setpoint generator
- sliding average determination
- brightness control
- programming interlock via access code
- protection class IP65 at the front side
- plug-in screw terminal
- optional: 2 PhotoMos outputs
- optional: analog output or galvanic insulated digital input
- accessories: PC-based configuration-kit PM-TOOL with CD & USB-adapter for devices without keypad and for a simple adjustment of standard devices

Identification

STANDARD TYPES	ORDER NUMBER
Direct voltage signals shunt Housing size: 48x24 mm	M3-7VR5A.0002.S70BD M3-7VR5A.0002.770BD

Options – breakdown of order code:

	M	3	7	V	R	5	B	0	0	0	2	7	7	0	B	D	
Basic type M-Line																	Dimension
																	<input type="checkbox"/> D physical unit
Installation depth 120 mm, incl. plug-in terminal			<input type="checkbox"/> 3														Version
																	<input type="checkbox"/> B B
Housing size B48xH24xD90 mm			<input type="checkbox"/> 7														Switching points
																	<input type="checkbox"/> 0 no switching points
Display type V, A				<input type="checkbox"/> V													<input type="checkbox"/> 2 2 PhotoMos-outputs
Display colour Blue Green Red Orange					<input type="checkbox"/> B <input type="checkbox"/> G <input type="checkbox"/> R <input type="checkbox"/> Y												Protection class
																	<input type="checkbox"/> 1 without keypad, operation on the back
Number of digits 5-digit						<input type="checkbox"/> 5											<input type="checkbox"/> 7 IP65 / plug-in terminal
Digit height 10 mm							<input type="checkbox"/> A										Voltage supply
																	<input type="checkbox"/> 7 24 VDC galv. insulated
Digital input without 1 digital input								<input type="checkbox"/> 0 <input type="checkbox"/> I									<input type="checkbox"/> S 100-240 VAC
																	Measuring input
																	<input type="checkbox"/> 2 Shunt
																	Analog output
																	<input type="checkbox"/> 0 without
																	<input type="checkbox"/> X 0-10 VDC, 0/4-20 mA
																	Sensor supply
																	<input type="checkbox"/> 0 without

Please state physical unit by order, e.g. A

Contents

1. Brief description	2
2. Assembly	3
3. Electrical connection	4
4. Functions and operation description	6
4.1. Programming software PM-TOOL	7
5. Setting up the device	8
5.1. Switching on	8
5.2. Standard parameterisation (flat operation level)	8
Value assignment for triggering of the signal input	
5.3. Programming interlock „RUN“	11
Activation/Deactivation of the programming interlock or change into the professional level respectively back into the flat operation level	
5.4. Extended parameterisation (professional operation level)	12
5.4.1. Signal input parameter „INP“	12
Value assignment for triggering of the signal input incl. linearisation	
5.4.2. General device parameter „FCT“	15
Superior device functions like Hold, Tara, Min/Max permanent, setpoint function respectively nominal value function, average determination, brightness control, as well as the control of the digital input and the keyboard configuration	
5.4.3. Safety parameter „COD“	19
Assignment of user and master code for locking or access to certain parameters like e.g. analog output and alarms, etc.	
5.4.4. Analog output parameter „OUT“	20
Analog output functions	
5.4.5. Relay functions „REL“	22
Parameter for the definition of the setpoints	
5.4.6. Alarm parameter „AL1...AL4“	24
Activator and dependencies of the alarms	
5.4.7. Totaliser (Volume metering) „TOT“	26
Parameter for calculation of the sum function	
6. Reset to factory settings	27
Reset of the parameter to the factory default settings	
7. Alarms / Relays	28
Function principle of the switching outputs	
8. Sensor alignment	29
Function diagram for sensors with existing trimming resistor	
9. Technical data	30
10. Safety advices	32
11. Error elimination	33

1. Brief description


The panel meter **M3-72** is a 5-digit device for direct voltage signals and a visual threshold value monitoring via the display. The configuration happens via four front keys or via the optional PC software PM-TOOL. An integrated programming interlock prevents unrequested changes of the parameters and can be unlocked again by an individual code. Optional the following functions are available: a supply for the sensor, a digital input for triggering of Hold (Tara) or an analog output for further processing in the equipment.

By use of the two optional galvanic insulated setpoints, free adjustable threshold values can be controlled and reported to a superior master display. The electrical connection is carried out on the back side via plug-in terminals.

Selectable functions like e.g. the request of the min/max-value, an average determination of the measuring signals, a nominal preset respectively setpoint preset, a direct change of threshold value in operation mode and additional measuring supporting points for linearisation complete the modern device concept.

2. Assembly

Please read the *Safety advices* on page 32 before installation and keep this user manual for future reference.

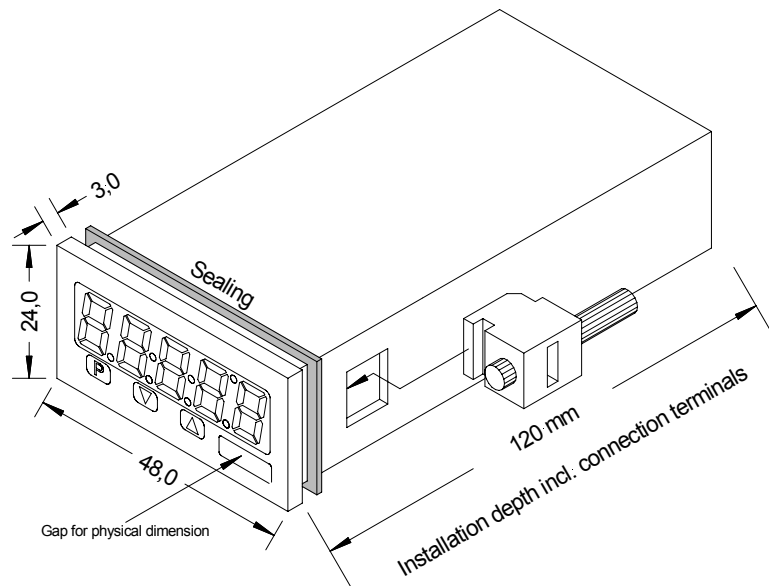


1. After removing the fixing elements, insert the device.
2. Check the seal to make sure it fits securely.
3. Click the fixing elements back into place and tighten the clamping screws by hand. Then use a screwdriver to tighten them another half a turn.

CAUTION! The torque should not exceed 0.1 Nm!


Change signs of the physical unit before assembly via a channel at the side of the front! The change can only be done from the outside before assembly!

3. Electrical connection


Type M3-7VR5A.0002.S70BD
with a supply of 100-240 VAC

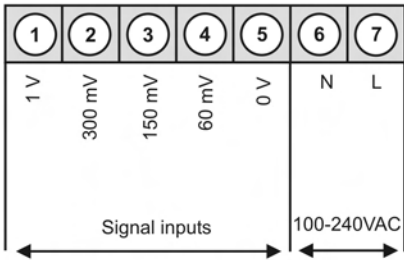


Type M3-7VR5A.0002.770BD
with a supply of 24 VDC

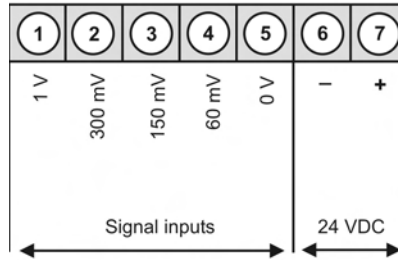


Options:

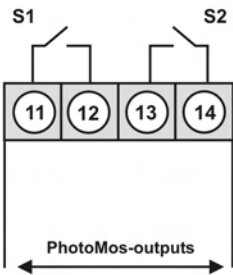


Options:

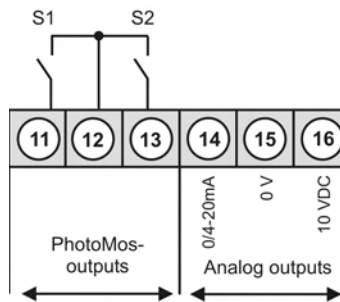

alternative to
analog output

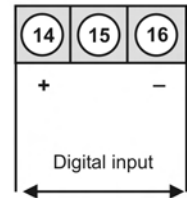

M3 with digital input and external voltage source

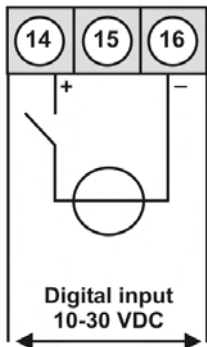

4. Functions and operation description

Operation

The operation is divided into three different levels.

Menu level (delivery status)
















This level is for the standard settings of the device. Only menu items which are sufficient to set the device into operation are displayed. To get into the professional level, run through the menu level and parameterise “*PROF*” under menu item *RUN*.

Menu group level (complete function volume)


Suited for complex applications as e.g. linkage of alarms, setpoint treatment, totaliser function etc. In this level function groups which allow an extended parameterisation of the standard settings are available. To leave the menu group level, run through this level and parameterise „*ULDC*„, under menu item *RUN*.

Parameterisation level:

Parameter deposited in the menu item can here be parameterised. Functions, that can be changed or adjusted, are always signalled by a flashing of the display. Settings that are made in the parameterisation level are confirmed with [P] and thus safed. By pressing the [O]-key („zero-key“) it leads to a break-off of the value input and to a change into the menu level. All adjustments are safed automatically by the device and it changes into operating mode, if no further key operation is done within the next 10 seconds.

Level	Key	Description
Menu level		Change to parameterisation level and deposited values.
	 	Keys for up and down navigation in the menu level.
	 	Change into operation mode by pushing both navigation keys at the same time.
Parameterisation level		To confirm the changes made at the parameterisation level.
	 	Adjustment of the value / the setting.
	 	Change into menu level or stop of the value input, by pushing both navigation keys at the same time.
Menu group level		Change to menu level
	 	Keys for up and down navigation in the menu group level.
	 	Change into operation mode or return into menu level, by pushing both navigation keys at the same time.

Function chart:

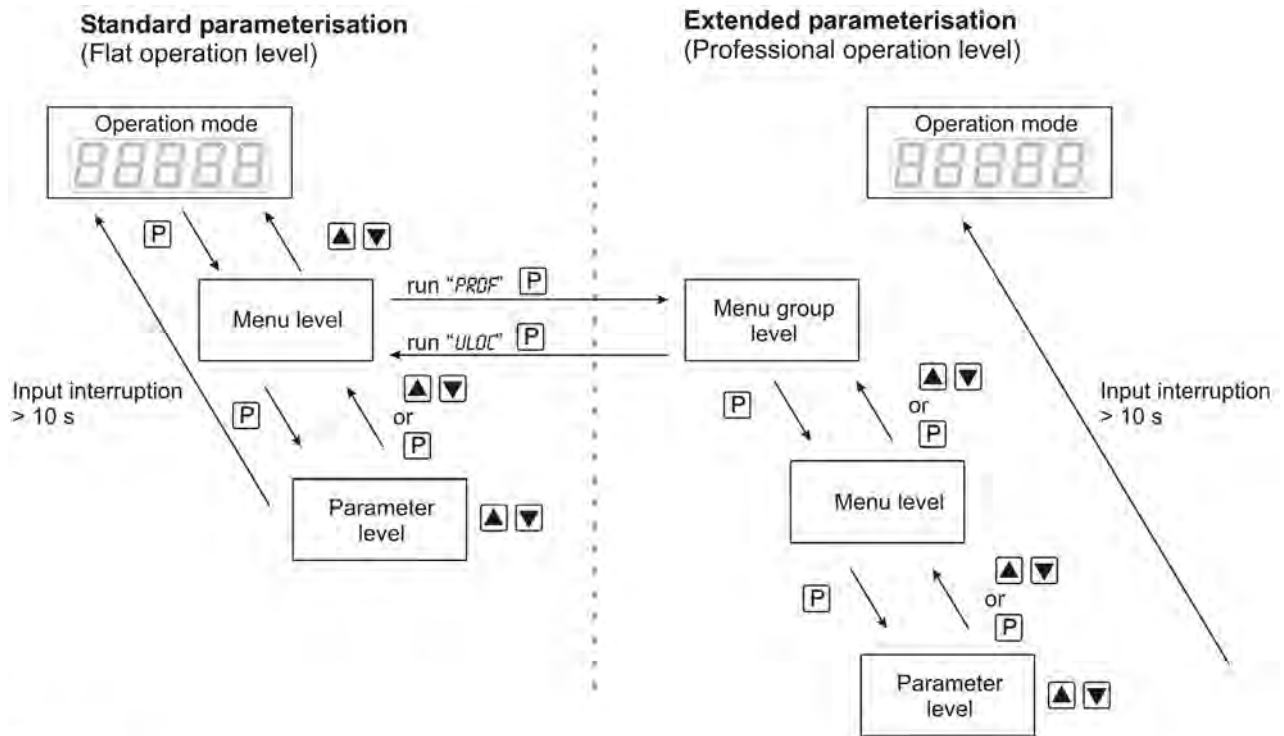

Explanation:

- P** Take-over
- ▲ ▼** Breakoff by simultaneously pushing of the navigation keys
- ▲** Value selection (+)
- ▼** Value selection (-)

4.1 Parameterisation software PM-TOOL:

Part of the PM-TOOL are the software on CD and an USB-cable with device adapter. The connection is done via a 4-pole micromatch-plug on the back side of the device, to the PC-side the connection ist done via an USB plug.

System requirements: PC incl. USB interface
 Software: Windows XP, Windows VISTA

With this tool the device configuration can be generated, omitted and safed on the PC. The parameters can be changed via the easy to handle program surface, whereat the operating mode and the possible selection options can be preset by the program.

5. Setting up the device

5.1. Switching on

Once the installation is complete, you can start the device by applying the voltage supply. Before, check once again that all electrical connections are correct.













Starting sequence











For 1 second during the switching-on process, the segment test (8 8 8 8 8) is displayed followed by an indication of the software type and, after that, also for 1 second the software version. After the starting sequence, the device switches to operation/display mode.







5.2. Standard parameterisation: (Flat operation level)

To parameterise the display, press the **[P]**-key in operating mode for 1 second. The display then changes to the menu level with the first menu item **TYPE**.

Menu level	Parameterisation level
	<p>Selection of the input signal, TYPE: Default: <i>SU.060</i></p> <p>There are several measuring input options: 60, 150, 600 or 1000 mV signals are available as works calibration (without application of the sensor signal) and <i>SU</i> as sensor calibration (with the sensor applied). Confirm the selection with [P] and the display switches back to menu level.</p>
	<p>Setting the end value of the measuring range, END: Default: <i>10000</i></p> <p>Set the end value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SEMS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p>Setting the start/offset value of the measuring range, OFFS: Default: <i>0</i></p> <p>Enter the start/offset value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SEMS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>


Menu level	Parameterisation level
	<p>Setting the decimal point, DOT: Default: 0</p> <p></p> <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	<p>Setting up the display time, SEC: Default: 1.0</p> <p></p> <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 sec up to 1 sec and in increments of 1.0 sec up to 10.0 sec. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	<p>Selection of analog output, OUT.RA: Default: 4-20</p> <p></p> <p>Three output signals are available: 0-10 VDC, 0-20 mA and 4-20 mA, with this function, the demanded signal is selected.</p>
	<p>Setting up the final value of the analog output, OUT.EN: Default: 10000</p> <p></p> <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	<p>Setting up the initial value of the analog output, OUT.OF: Default: 00000</p> <p></p> <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	<p>Threshold values / Limits, LI-1: Default: 2000</p> <p></p> <p>This value defines the threshold, that activates/deactivates an alarm.</p>

Menu level	Parameterisation level
	<p>Hysteresis for limit values, HY-1: Default: 00000</p> <p>  </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p>Function for threshold value undercut /exceedance, FU-1: Default: HIGH</p> <p>  </p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>
	<p>Threshold values / Limits, LI-2: Default: 3000</p> <p>  </p> <p>This value defines the threshold, that activates/deactivates an alarm.</p>
	<p>Hysteresis for limit values, HY-2: Default: 00000</p> <p>  </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p>Function for threshold value undercut /exceedance, FU-2: Default: HIGH</p> <p>  </p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>









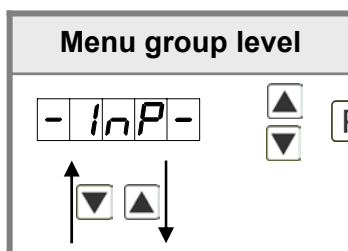



Menu level	Parameterisation level
	<p>User code (4-digit number-combination, free available), <i>U.CODE</i>: Default: 0000</p>  <p>If this code was set (>0000), all parameters are locked for the user, if <i>LOC</i> has been selected before under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i>. The <i>U.CODE</i> needs to be entered to get to the reduced number of parameter sets. The code has to be entered before each parameterisation, until the <i>A.CODE</i> (Master code) unlocks all parameters again.</p>
	<p>Master code (4-digit number-combination, free available), <i>A.CODE</i>: Default: 1234</p>  <p>All parameters can be unlocked with this code, after <i>LOC</i> has been activated under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i> and enables the user to reach all parameters by entering the <i>A.CODE</i>. Under <i>RUN</i> the parameterisation can be activated permanently by selecting <i>ULOC</i> or <i>PROF</i>, thus at an anew pushing of [P] in operation mode, the code needs not to be entered again.</p>
<p>5.3. Programming interlock „<i>RUN</i>“</p>	
	<p>Activation / deactivation of the programming lock or completion of the standard parameterisation with change into menu group level (complete function range), <i>RUN</i>: Default: <i>ULOC</i></p>  <p>With the navigation keys [▲] [▼], you can choose between the deactivated key lock <i>ULOC</i> (works setting) and the activated key lock <i>LOC</i>, or the change into the menu group level <i>PROF</i>. Confirm the selection with [P]. After this, the display confirms the settings with "- - - -", and automatically switches to operating mode. If <i>LOC</i> was selected, the keyboard is locked. To get back into the menu level, press [P] for 3 seconds in operating mode. Now enter the <i>CODE</i> (works setting 1 2 3 4) that appears using [▲] [▼] plus [P] to unlock the keyboard. <i>FAIL</i> appears if the input is wrong. To parameterise further functions <i>PROF</i> needs to be set. The device confirms this setting with „- - - -“, and changes automatically in operation mode. By pressing [P] for approx. 3 seconds in operation mode, the first menu group <i>INP</i> is shown in the display and thus confirms the change into the extended parameterisation. It stays activated as long as <i>ULOC</i> or <i>LOC</i> is entered in menu group <i>RUN</i>.</p>



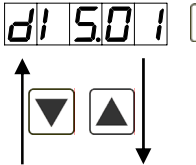

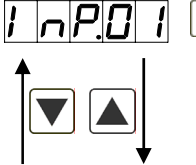

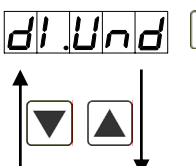

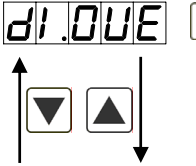


5.4. Extended parameterisation (Professional operation level)

5.4.1. Signal input parameters




Menu level	Parameterisation level
	<p>Selection of the input signal, <i>TYPE</i>: Default: <i>SU.060</i></p> <p>There are several measuring input options: 60, 150, 600 or 1000 mV signals are available as works calibration (without application of the sensor signal) and <i>SU</i> as sensor calibration (with the sensor applied). Confirm the selection with [P] and the display switches back to menu level.</p>
	<p>Setting the end value of the measuring range, <i>END</i>: Default: <i>10000</i></p> <p>Set the end value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p>Setting the start/offset value of the measuring range, <i>OFFS</i>: Default: <i>0</i></p> <p>Enter the start/offset value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p>Setting the decimal point, <i>DOT</i>: Default: <i>0</i></p> <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>








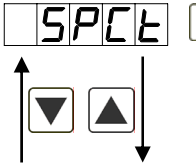


Menu level	Parameterisation level
	<p>Setting up the display time, SEC: Default: 1.0</p> <p>  </p> <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 sec up to 1 sec and in increments of 1.0 sec up to 10.0 sec. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	<p>Rescaling the measuring input values, ENDA: Default: 10000</p> <p>  </p> <p>With this function, you can rescale the input value of e.g. 19.5 mA (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	<p>Rescaling the measuring input values, OFFSA: Default: 0</p> <p>  </p> <p>With this function, you can rescale the input value of e.g. 3.5 mA (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	<p>Setting up the tare/offset value, TARA: Default: 0</p> <p>  </p> <p>The given value is added to the linearized value. In this way, the characteristic line can be shifted by the selected amount.</p>
	<p>Setting up the balance point, ADJ.PT: Default: 08000</p> <p>  </p> <p>The balance point for the final value can be chosen from the measuring range by SENS.U with 0...10 V or SENS.A with 0...20 mA in %. The preset 80.000% result from the widespread detuning of the melt pressure sensors.</p>
	<p>Setting up the physical unit, UNIT: Default: NO</p> <p>  </p> <p>One can choose between the above shown physical units. It will be displayed on the 5th digit of the display.</p>

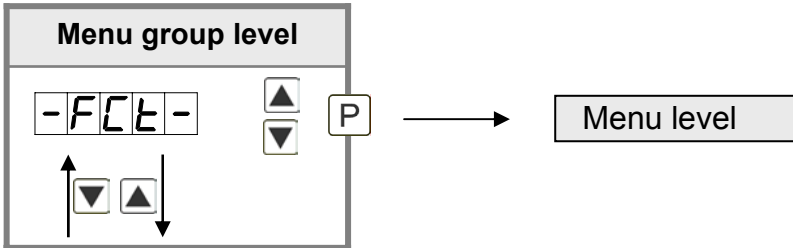

Menu level	Parameterisation level
	<p>Number of additional setpoints, <i>SPCT</i>: Default: 00</p>  <p>30 additional setpoints can be defined to the initial- and final value, so linear sensor values are not linearised. Only activated setpoint parameters are displayed.</p>
	<p>Display values for setpoints, <i>DIS.01 ... DIS.30</i>:</p>  <p>Under this parameter setpoints are defined according to their value. At the sensor calibration, like at final value/offset, one is asked at the end if a calibration shall be activated.</p>
	<p>Analog values for setpoints, <i>INP.01 ... INP.30</i>:</p>  <p>The setpoints are always set according to the selected input signal. The desired analog values can be freely parameterised in ascending order.</p>
	<p>Device undercut, <i>DI.UND</i>: Default: -9999</p>  <p>With this function the device undercut (____) can be defined on a definite value. Exception is input type 4-20 mA, it already shows undercut at a signal <1 mA, so a sensor failure is marked.</p>
	<p>Display overflow, <i>DI.OUE</i>: Default: 9999</p>  <p>With this function the display overflow (----) can be defined on a definite value.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „-IMP-“.</p>






5.4.2. General device parameters




Menu level	Parameterisation level
	<p>Display time, <i>DISC</i>: Default: 01.0</p> <p>di.SEC P 00.1 00.9 then 01.0 10.0 P</p> <p>The display is set up with [▲] [▼]. Thereby it switches until 1 second in increments of 0.1 seconds and until 10.0 seconds in increments of 1.0. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Rounding of display values, <i>ROUND</i>: Default: 00001</p> <p>round P 00001 00005 00010 00050 P</p> <p>This function is for instable display values, where the display value is changed in increments of 1-, 5-, 10- or 50. This does not affect the resolution of the optional outputs. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Arithmetic, <i>ARITH</i>: Default: NO</p> <p>ArITH P no rE2IP rAdIC SQUAR P</p> <p style="text-align: center;">Reciprocal value Square root Square</p> <p>With this function the calculated value, not the measuring value, is shown in the display. With NO, no calculation is deposited. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Sliding average determination, <i>AVG</i>: Default: 10</p> <p>AVG P 01 50 P</p> <p>Under this menu item, the number of measurements that need to be averaged are preset. The averaging time results from the product of measuring time <i>SEC</i> and the averaged measurements <i>AVG</i>. With selection of <i>AVG</i> in menu level <i>DISPL</i> the result is shown in the display and evaluated when entered in the alarm <i>ALT-AL4</i> or the analog output <i>OUTPT</i>.</p>
	<p>Zero point slowdown, <i>ZERO</i>: Default: 00</p> <p>ZEro P 0 P 0 P</p> <p>At the zero point slowdown, a value range around the zero point can be preset, so the display shows a zero. If e.g. 10 is set, the display would show a zero in the value range from -10 to +10; below continue with -11 and beyond with +11. The maximum adjustable range of value is 99.</p>

Menu level	Parameterisation level
	<p>Solid constant value, <i>CONST</i>: Default: 0</p> <p></p> <p>The constant value can be evaluated like the current measurand via the alarms or the analog output. The decimal place cannot be changed for this value and is taken over from the current measurand. So, with this value a setpoint generator can be realised via the analog output. Furthermore it can be used as calculated difference. At this the constant value needs to be subtracted from the current measurand and the difference is evaluated in the alerting or via the analog output. Thus regulation can be displayed quite easy with this parameterisation.</p>
	<p>Minimum constant value, <i>CON.MI</i>: Default: -9999</p> <p></p> <p>The minimum constant value is selected and adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p>Maximum constant value, <i>CON.MA</i>: Default: 99999</p> <p></p> <p>The maximum constant value is selected and adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p>Display, <i>DISPL</i>: Default: ACTUA</p> <p></p> <p>With this function the current measuring value, the min-value/max-value, the totaliser, the process-controlled hold-value, the sliding average value, the constant value or the difference between constant value and current value can be allocated to the display. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Brightness control, <i>LIGHT</i>: Default: 15</p> <p></p> <p>The brightness of the display can be adjusted in 16 levels from 00 = very dark to 15 = very bright via this parameter or alternatively via the navigation keys from the outside. During the start of the device the level that is deposited under this parameter will always be used, even though the brightness has been changed via the navigation keys in the meantime.</p>


Menu level	Parameterisation level
<p>FLASH P</p> 	<p>Display flashing, FLASH: Default: <i>NO</i></p> <p>no ▲ AL-1 ▲ AL-2 ▲ AL.12 ▲ ▼ ▼ ▼ ▼ ▼</p> <p>AL-3 ▲ AL-4 ▲ AL.34 ▲ ALAL ▲ P ▼ ▼ ▼ ▼ ▼</p> <p>A display flashing can be added as additional alarm function either to single or to a combination of off-limit condition. With <i>NO</i>, no flashing is allocated.</p>
<p>EAST P</p> 	<p>Assignment (deposit) of key functions, TAST: Default: <i>NO</i></p> <p>EHTr ▲ LI.12 ▲ LI.34 ▲ TARr ▲ ▼ ▼ ▼ ▼ ▼</p> <p>SEtTA ▲ totAL ▲ tot.rE ▲ EHT.rE ▲ ▼ ▼ ▼ ▼ ▼</p> <p>ACTUr ▲ LIGHT ▲ LI.1 ▲ LI.1-2 ▲ ▼ ▼ ▼ ▼ ▼</p> <p>LI.1-3 ▲ LI.1-4 ▲ no ▲ P ▼ ▼ ▼ ▼ ▼</p> <p>For the operation mode, special functions can be deposited on the navigation keys [▲] [▼], in particular this function is made for devices in housing size 48x24 mm which do not have a fourth key ([O]-key). If the min/max-memory is activated with <i>EHTr</i>, all measured min/max-values are safed during operation and can be recalled via the navigation keys. The values get lost by re-start of the device. If the threshold value correction <i>LI.12</i> or <i>LI.34</i> is choosen, the values of the threshold can be changed during operation without disturbing the operating procedure. With <i>TARr</i> the device is set temporarily on a parameterised value. The device acknowledges the correct taring with <i>00000</i> in the display. <i>SEtTA</i> switches into the offset value and can be adjusted via the navigation keys. Via <i>TOTAL</i> the current value of the totaliser can be displayed for approx. 7 seconds, after this the device switches back on the parameterised display value. If <i>TOT.RE</i> is deposited, the totaliser can be set back by pressing of the navigation keys [▲] [▼], the device acknowledges this with <i>00000</i> in the display. By allocation on <i>EHT.RE</i> the min/max-memory is deleted. At <i>ACTUr</i> the measuring value is shown for approx. 7 seconds, after this the device switches back on the parameterised display value With <i>LIGHT</i> the brightness of the display is adjusted. This setting is not safed and gets lost at a re-start fo the device. Via selection <i>L1.1</i>, <i>L1.1-2</i>, <i>L1.1-3</i>, <i>L1.1-4</i> threshold values can be adressed via the navigation keys; they can be changed digit per digit or taken over by pushing the [P]-key. The adjustment is taken over directly, an existing limit value monitoring and the current measurement will not be influenced by this. If <i>NO</i> is selected, the navigation keys are without any function in the operation mode.</p>

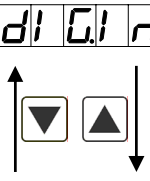Menu level	Parameterisation level
 	<p data-bbox="352 331 798 392">Special function digital input, DIG.IN: Default: <i>NO</i></p> <div data-bbox="383 425 1332 772">  <p> <i>TARA</i> <i>SEt.tA</i> <i>tOtAL</i> <i>tOt.rE</i> <i>EHT.rE</i> <i>ActuA</i> <i>HoLD</i> <i>AVG</i> <i>SECAL</i> <i>const</i> <i>AL-1 ... AL-4</i> <i>no</i> </p> </div> <p data-bbox="352 840 1484 1344">For operating mode, special functions can be realised via the digital input. This function is actuated by pressing the key. With <i>TARA</i> the device is tared to zero and safed permanently as offset. The display acknowledges this with <i>00000</i> in the display. <i>SEt.tA</i> switches into the offset value and can be changed via the navigation keys. Via <i>TOTAL</i> the current value of the totaliser can be displayed for approx. 7 seconds, after this the device switches back on the parameterised display value. If <i>TOT.RE</i> is deposited, the totaliser can be set back by pressing the navigation keys, the device acknowledges this with <i>00000</i> in the display. <i>EHT.RE</i> deletes the min/max-memory. If <i>HOLD</i> has been selected, the moment can be hold constant by triggering the digital input, and is updated by releasing the key. Advice: <i>HOLD</i> can only be activated, if <i>HOLD</i> was selected under parameter <i>DISPL. ACTUA</i> shows the measuring value for approx. 7 seconds, after this the device switches back on the parameterised display value. The same applies to <i>AVG</i>, here the sliding average value is displayed. A sensor calibration is done by triggering of the digital input via <i>SE.CAL</i>, the flow diagram is shown in <i>Chapter 8</i>. The constant value <i>CONST</i> can be recalled via the digital input, or changed digit per digit. At <i>AL-1...AL-4</i> there can be set an output and therewith e.g. a setpoint adjustment can be done. If <i>NO</i> is selected, the digital input is without any function in the operation mode.</p>
 	<p data-bbox="352 1366 742 1400">Back to menu group level, RET:</p> <p data-bbox="352 1512 1412 1545">With [P] the selection is confirmed and the device changes into menu group level „- FCT -“.</p>


5.4.3. Safety parameters

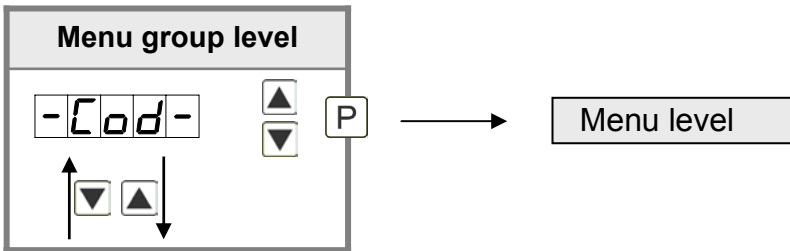

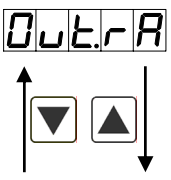

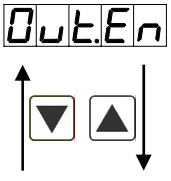



Menu level	Parameterisation level
	<p>User code <i>U.CODE</i>: Default: 0000</p> <p>0 P 0 P 0 P 0 P 0 P</p> <p>Via this code, reduced sets of parameters can be set free. A change of the <i>U.CODE</i> can be done via the correct input of the <i>R.CODE</i> (master code).</p>
	<p>Master code, <i>R.CODE</i>: Default: 1234</p> <p>1 P 2 P 3 P 4 P</p> <p>By entering <i>R.CODE</i> the device will be unlocked and all parameters are released.</p>
	<p>Release/lock analog output parameter, <i>OUT.LE</i>: Default: ALL</p> <p>no EN-OF OUT.EO ALL P</p> <p>Analog output parameters can be locked or released for the user:</p> <ul style="list-style-type: none"> - At <i>EN-OF</i> the initial or final value can be changed in operation mode. - At <i>OUT.EO</i> the output signal can be changed from e.g. 0-20 mA to 4-20 mA or 0-10 VDC. - At <i>ALL</i> analog output parameters are released. - At <i>NO</i> all analog output parameters are locked.
	<p>Release/lock alarm parameters, <i>AL.LEU</i>: Default: ALL</p> <p>no LIMIT ALR.NL ALL P</p> <p>This parameter describes the user release/user lock of the alarm.</p> <ul style="list-style-type: none"> - <i>LIMIT</i>, here only the range of value of the threshold values 1-4 can be changed. - <i>ALR.NL</i>, here the range of value and the alarm trigger can be changed. - <i>ALL</i>, all alarm parameters are released. - <i>NO</i>, all alarm parameters are locked.

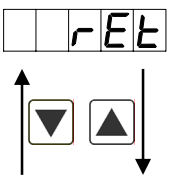Menu level	Parameterisation level
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- <i>COO</i> -“.</p>


5.4.4. Analog output parameters

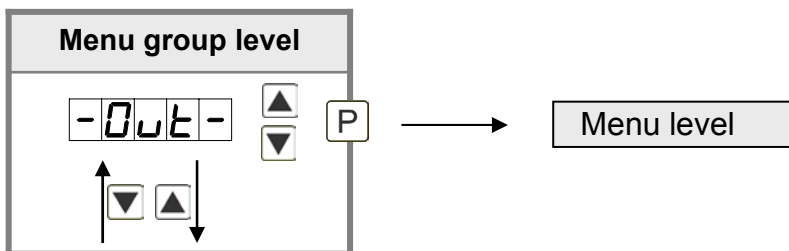

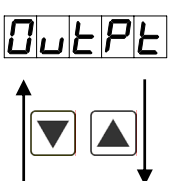


Menu level	Parameterisation level
	<p>Selection reference analog output, <i>OUTPT</i>: Default: <i>ACTUA</i></p> <p>  </p> <p>The analog output signal can refer to different functions, in detail this are the current measuring value, min-value, max-value or totaliser-/sum-function, the sliding average value, the constant value or the difference between the current value and the constant value. If <i>HOLD</i> is selected the signal of the analog output will be hold and processed just after deactivation of <i>HOLD</i>. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Selection analog output, <i>OUT.RA</i>: Default: <i>4-20</i></p> <p>  </p> <p>There are 3 output signals available: 0-10 VDC, 0-20 mA and 4-20 mA. With this function the demanded signal can be selected.</p>
	<p>Setting up the final value of the analog output, <i>OUT.EN</i>: Default: <i>10000</i></p> <p>  </p> <p>The final value can be adjusted from the smallest to the largest digit with [▲] [▼]. Confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level.</p>

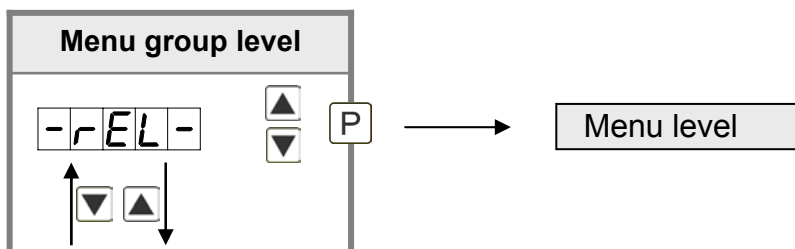

Menu level	Parameterisation level
	<p>Setting the initial value of the analog output, <i>OUT.OF</i>: Default: 00000</p> <p>The initial value is adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be parameterized on the highest digit. After the last digit the device changes back into menu level.</p>
	<p>Overflow behaviour, <i>O.FLOU</i>: Default: <i>EDGE</i></p> <p>To recognise and evaluate faulty signals, e.g. by a controller, the overflow behaviour of the analog output can be defined. As overflow can be seen either <i>EDGE</i>, that means the analog output runs on the set limits e.g. 4 and 20 mA, or <i>TO.OFF</i> (input value smaller than initial value, analog output switches on e.g. 4 mA), <i>TO.END</i> (higher than final value, analog output switches on e.g. 20 mA). If <i>TO.MIN</i> or <i>TO.MAX</i> is set, the analog output switches on the smallest or highest possible binary value. This means that values of e.g. 0 mA, 0 VDC or values higher than 20 mA or 10 VDC can be reached. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- OUT -“.</p>

5.4.5. Relay functions





Menu level	Parameterisation level												
	<p>Alarm relay 1, REL-1: Default: <i>AL-1</i></p> <p><i>rEL-1</i> [P] <i>AL-1</i> <i>AL-4</i> <i>AL-n1</i> <i>AL-n4</i></p> <p><i>LOGIC</i> <i>OFF</i> <i>On</i> <i>CAL</i></p> <p><i>CAL.OF</i> <i>CAL.EN</i> [P]</p> <p>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL1/4</i> or de-activated alarms <i>ALn1/4</i>. If <i>LOGIC</i> is selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. One can only get to these two menu levels via <i>LOGIC</i>, at all other selected functions, these two parameters are overleaped. Via <i>ON/OFF</i> the setpoints can be activated/de-activated, in this case the output and the setpoint display are set/not set on the front of the device. The parameters <i>CAL</i>, <i>CAL.OF</i> and <i>CAL.EN</i> can only be used in accordance with the semi-automatic calibration (<i>Chapter 8. Sensor alignment</i>). At <i>CAL</i> the relay switches during sensor calibration, at <i>CAL.OF</i> during offset calibration and at <i>CAL.EN</i> during the calibration of the final value. With [P] the selection is confirmed and the device changes into menu level.</p>												
	<p>Logic relay 1, LOG-1 Default: <i>OR</i></p> <p><i>LOG-1</i> [P] <i>or</i> <i>nor</i> <i>And</i> <i>nAnd</i> [P]</p> <p>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>. This parameter can only be selected if <i>LOGIC</i> was selected under <i>REL-1</i>.</p> <table border="1"> <tbody> <tr> <td><i>or</i></td> <td>$A1 \vee A2$</td> <td>As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td><i>nor</i></td> <td>$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$</td> <td>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td><i>And</i></td> <td>$A1 \wedge A2$</td> <td>The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td><i>nAnd</i></td> <td>$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$</td> <td>As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p>With [P] the selection is confirmed and the device changes into menu level.</p>	<i>or</i>	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.	<i>nor</i>	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.	<i>And</i>	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.	<i>nAnd</i>	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.
<i>or</i>	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.											
<i>nor</i>	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.											
<i>And</i>	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.											
<i>nAnd</i>	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.											







Menu level	Parameterisation level													
	<p>Alarms for relay 1, COM-1: Default: <i>AL-1</i></p> <p>COM-1 [P] AL-1 [▲] [▼] AL-2 [▲] [▼] ... AL-1234 [▲] [▼] [P]</p> <p>The allocation of the alarms to relay 1 happens via this parameter, one alarm or a group of alarms can be chosen. With [P] the selection is confirmed and the device changes into menu level.</p>													
	<p>Alarm relay 2, REL-2: Default: <i>AL-2</i></p> <p>REL-2 [P] AL-5 [▲] [▼] ... AL-8 [▲] [▼] AL-n5 [▲] [▼] ... AL-n8 [▲] [▼]</p> <p>LOGIC [▲] [▼] OFF [▲] [▼] ON [▲] [▼] CAL [▲] [▼]</p> <p>CALOF [▲] [▼] CALEN [▲] [▼] [P]</p> <p>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL1/4</i> or de-activated alarms <i>ALN1/4</i>. If <i>LOGIC</i> is selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. One can only get to these two menu levels via <i>LOGIC</i>, at all other selected functions, these two parameters are overleaped. Via <i>ON/OFF</i> the setpoints can be activated/de-activated, in this case the output and the setpoint display are set/not set on the front of the device. The parameters <i>CAL</i>, <i>CALOF</i> and <i>CALEN</i> can only be used in accordance with the semi-automatic calibration (<i>Chapter 8. Sensor alignment</i>). At <i>CAL</i> the relay switches during sensor calibration, at <i>CALOF</i> during offset calibration and at <i>CALEN</i> during the calibration of the final value. With [P] the selection is confirmed and the device changes into menu level.</p>													
	<p>Logic relay 2, LOG-2: Default: <i>OR</i></p> <p>LOG-2 [P] OR [▲] [▼] NOR [▲] [▼] AND [▲] [▼] NAND [▲] [▼] [P]</p> <p>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>. This parameter can only be selected if <i>LOGIC</i> was selected under <i>REL-1</i>.</p> <table border="1" data-bbox="343 1534 1492 1859"> <tbody> <tr> <td data-bbox="343 1534 518 1601">OR</td> <td data-bbox="523 1534 821 1601">$A1 \vee A2$</td> <td data-bbox="826 1534 1492 1601">As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td data-bbox="343 1608 518 1675">NOR</td> <td data-bbox="523 1608 821 1675">$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$</td> <td data-bbox="826 1608 1492 1675">The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td data-bbox="343 1682 518 1749">AND</td> <td data-bbox="523 1682 821 1749">$A1 \wedge A2$</td> <td data-bbox="826 1682 1492 1749">The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td data-bbox="343 1756 518 1823">NAND</td> <td data-bbox="523 1756 821 1823">$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$</td> <td data-bbox="826 1756 1492 1823">As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p>With [P] the selection is confirmed and the device changes into menu level.</p>		OR	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.	NOR	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.	AND	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.	NAND	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.
OR	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.												
NOR	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.												
AND	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.												
NAND	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.												

Menu level	Parameterisation level
	<p>Alarms for relay 2, <i>CON-2</i>: Default: <i>R. 2</i></p> <p><i>CON-2</i> [P] <i>R. 1</i> [▲] [▼] <i>R. 2</i> [▲] [▼] ... <i>R. 1234</i> [▲] [▼] [P]</p> <p>The allocation of the alarms to relay 5 happens via this parameter, one alarm or a group of alarms can be chosen. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- REL -“.</p>

5.4.6. Alarm parameters

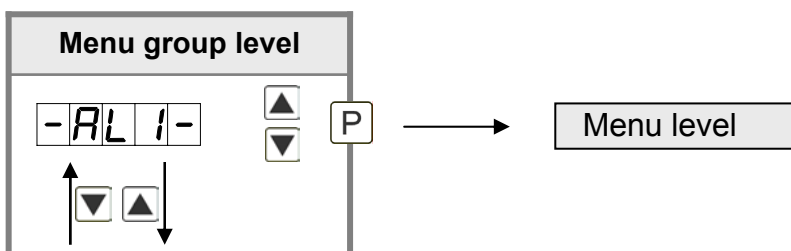


Menu level	Parameterisation level
	<p>Dependency alarm1, <i>ALRM.1</i>: Default: <i>ACTUA</i></p> <p><i>ALRM.1</i> [P] <i>ACTUA</i> [▲] [▼] <i>MINUA</i> [▲] [▼] <i>MAXUA</i> [▲] [▼] <i>TOTAL</i> [▲] [▼]</p> <p><i>HOLD</i> [▲] [▼] <i>AUC</i> [▲] [▼] <i>const</i> [▲] [▼] <i>dIFF</i> [▲] [▼]</p> <p><i>EHTER</i> [▲] [▼] [P]</p> <p>The dependency of alarm1 can be related to special functions, in detail these are the current measurand, the MIN-value, the MAX-value, the totaliser value/sum value, the sliding average value, the constant value or the difference between the current measurand and the constant value. If <i>HOLD</i> is selected the alarm is hold and processed just after deactivation of <i>HOLD</i>. <i>EHTER</i> causes the dependency either by pressing the [O]-key on the front of the housing or by an external signal via the digital input. With [P] the selection is confirmed and the device changes into menu level.</p> <p>Example: By using the maximum value <i>ALRM.1 = MAX.VA</i> in combination with a threshold monitoring <i>FU-1 = HIGH</i>, an alarm confirmation can be realised. Use the digital input for confirmation.</p>

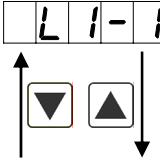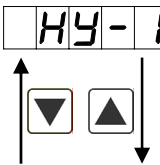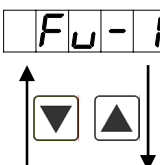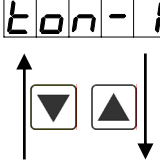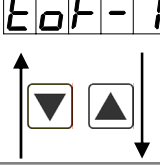

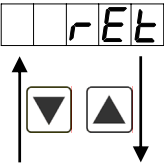
Menu level	Parameterisation level
	<p>Threshold values / Limit values, <i>LI-1</i>: Default: <i>2000</i></p> <p><i>LI-1</i> [P] [0] [P] [0] [P] [0] [P] [0] [P] [0] [P] [0] [P] [0] [P]</p> <p>The limit value defines the threshold, that activates/deactivates an alarm.</p>
	<p>Hysteresis for threshold values, <i>HY-1</i>: Default: <i>00000</i></p> <p><i>HY-1</i> [P] [0] [P] [0] [P] [0] [P] [0] [P] [0] [P] [0] [P] [0] [P]</p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p>Function for threshold value undercut /exceedance, <i>FU-1</i>: Default: <i>HIGH</i></p> <p><i>FU-1</i> [P] [H] [I] [G] [H] [▲] [L] [O] [U] [U] [▼] [P]</p> <p>A limit value undercut is selected with <i>LOUU</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>
	<p>Switching-on delay, <i>TON-1</i>: Default: <i>000</i></p> <p><i>TON-1</i> [P] [0] [P] [0] [P] [0] [P] [0] [P]</p> <p>For limit value 1 one can preset a delayed switching-on of 0-100 seconds.</p>
	<p>Switching-off delay, <i>TOF-1</i>: Default: <i>000</i></p> <p><i>TOF-1</i> [P] [0] [P] [0] [P] [0] [P] [0] [P]</p> <p>For limit value 1 one can preset a delayed switching-off of 0-100 seconds.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p><i>RET</i></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-AL1-“.</p>

The same applies to *-AL2-* to *-ALB-*.


5.4.7. Totaliser (Volume metering)

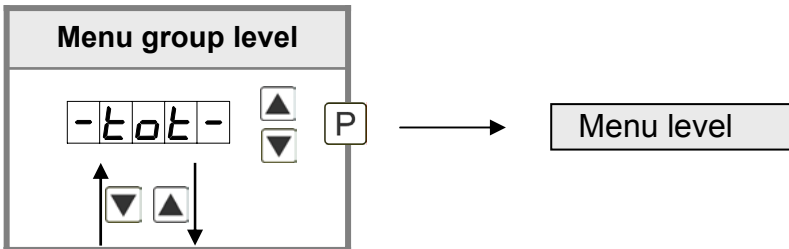

Menu level	Parameterisation level
	<p>Totaliser state, TOTAL: Default: <i>OFF</i></p> <p>total P <input type="checkbox"/> OFF <input type="checkbox"/> STEAD <input type="checkbox"/> TEMP P</p> <p>The totaliser realizes measurements on a time base of e.g. l/h, at this the scaled input signal is integrated by a time and steadily (select <i>STEAD</i>) or temporarily (select <i>TEMP</i>) safed. Select the constant storage for consumption measurements and the quick storage for frequently filling processes. During the constant storage <i>STEAD</i> the current sum value is safed at each totaliser reset. Furthermore it is safed every 30 minutes in the not-quick storage of the device. If <i>OFF</i> is selected, the function is deactivated. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Time base, T.BASE: Default: <i>SEC</i></p> <p>t.bASE P <input type="checkbox"/> SEC <input type="checkbox"/> min <input type="checkbox"/> hour P</p> <p>Under this parameter the time base of the measurement can be preset in seconds, minutes or hours.</p>
	<p>Totaliser factor, FACTO: Default: <i>1E0</i></p> <p>FActo P <input type="checkbox"/> 1E0 <input type="checkbox"/> ... <input type="checkbox"/> 1E6 P</p> <p>At this the factor (1E0...1E6) respectively the divisor for the internal calculation of the measuring value is assigned.</p>
	<p>Setting up the decimal point for the totaliser, TOT.DT: Default: <i>0</i></p> <p>tot.dt P <input type="checkbox"/> 0 <input type="checkbox"/> 0.0 <input type="checkbox"/> 0.00 <input type="checkbox"/> 0.000 <input type="checkbox"/> 0.0000 <input type="checkbox"/> 000000 P</p> <p>The decimal point of the device can be adjusted with the navigation keys [▲] [▼]. With [P] the selection is confirmed and the device changes into menu level.</p>

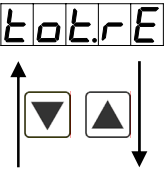Menu level	Parameterisation level
	<p>Totaliser reset, TOT.RE: Default: 00000</p>  <p>The reset value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and digit per digit confirmed with [P]. After the last digit, the display switches back to the menu level. The activator for the reset is parameter driven via the 4th key or via the optional digital input.</p>
	<p>Back to menu group level, RET:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- TOT -“.</p>

Programming interlock, RUN:

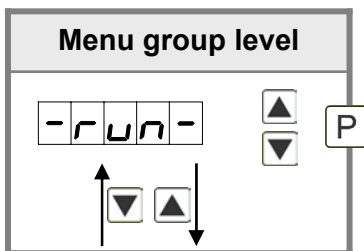

Description see page 11, menu level *RUN*

6. Reset to factory settings

To return the unit to a **defined basic state**, a reset can be carried out to the default values.

The following procedure should be used:

- Switch off the power supply
- Press button [P]
- Switch on voltage supply and press [P]-button until „- - - - -“ is shown in the display.


With reset, the default values of the program table are loaded and used for subsequent operation. This sets the unit back to the state in which it was supplied.

Caution! All application-related data are lost.

7. Alarms / Relays


This device has 4 virtual alarms that can monitor one limit value in regard of an undercut or exceedance. Each alarm can be allocated to an optional relay output S1-S2; furthermore alarms can be controlled by events like e.g. hold or min-/max-value.

Function principle of alarms / relays	
Alarm / Relay x	Deactivated, instantaneous value, min-/max-value, hold-value, totaliser value, sliding average value, constant value, difference between instantaneous value and constant value or an actuation via the digital input
Switching threshold	Threshold / limit value of the change-over
Hysteresis	Broadness of the window between the switching thresholds
Working principle	Operating current / Quiescent current

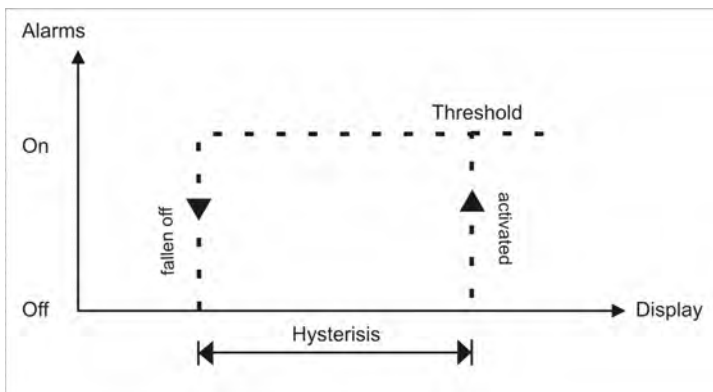


Operating current

By operating current the alarm S1-S2 is off below the threshold and "on" on reaching the threshold.

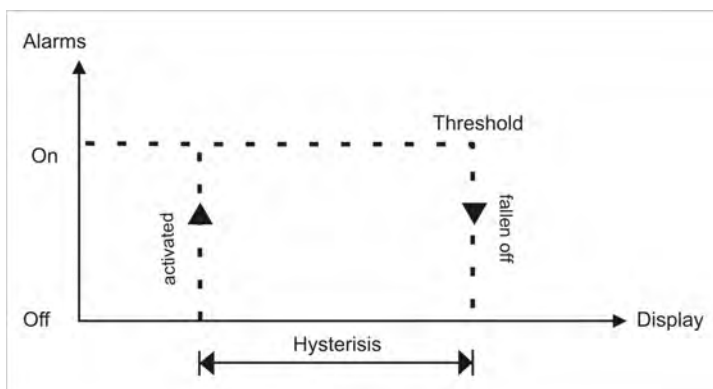

Quiescent current

By quiescent current the alarm S1-S2 is on below the threshold and switched "off" on reaching the threshold.

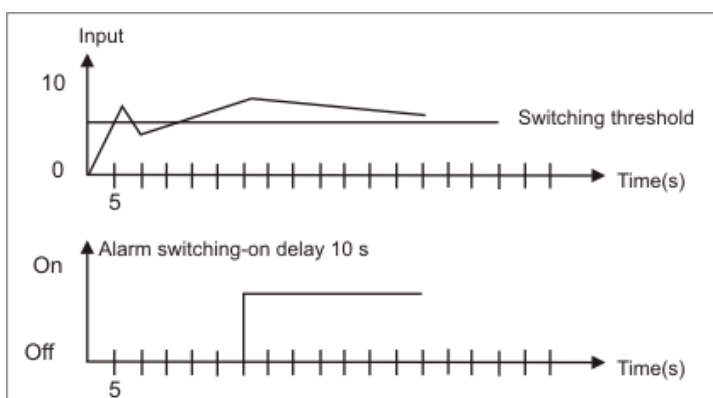


Switching-on delay

The switching-on delay is activated via an alarm and e.g. switched 10 seconds after reaching the switching threshold, a short-term exceedance of the switching value does not cause an alarm, respectively does not cause a switching operation of the relay. The switching-off delay operates in the same way, keeps the alarm / the relay switched longer for the parameterised time.

8. Sensor calibration offset/final value

The device is equipped with a semi-automatic sensor calibration (*SENSU/SENSA*). A switching output operates the trimming resistor, which exists in some sensors. An adjustment of offset and final value takes place, after which the sensor can be used directly. Depending on parameterisation, the calibration can be realized via the fourth key or via the digital input. It is possible to key during the calibration steps. So, reference signals can be connected manually. However the calibration will be interrupted after 30 seconds.

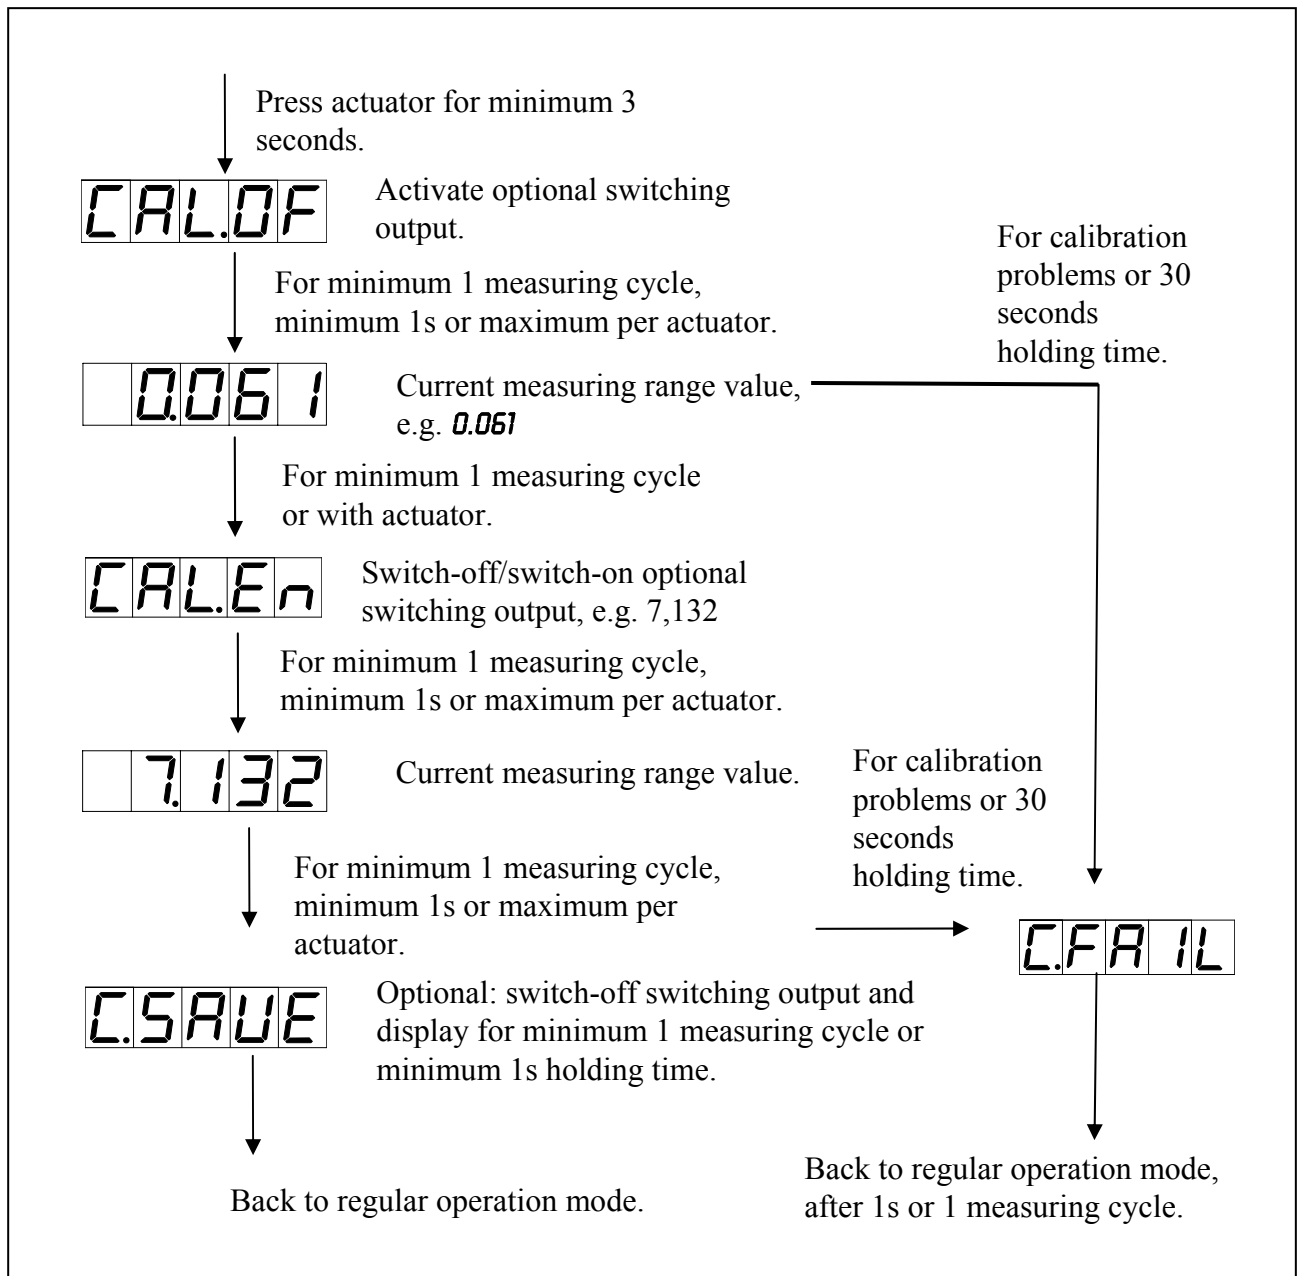

9. Technical date

Housing				
Dimensions	48x24x90 mm (BxHxD)			
	48x24x109 mm (BxHxD) including plug-in terminal			
Panel cut-out	45.0 ^{+0.6} x 22.2 ^{+0.3} mm			
Wall thickness	up to 5 mm			
Fixing elements	screw elements			
Material	PC polycarbonate, black, UL94V-0			
Sealing material	EPDM, 65 shore, black			
Protection class	standard IP65 (front), IP00 (back side)			
Weight	approx. 200 g			
Connection	plug-in terminal; wire-cross section up to 2.5 mm ²			
Display				
Digit height	10 mm			
Segment colour	red (optional green, orange or blue)			
Display range	-19999 to 99999			
Setpoints	one LED per setpoint			
Overflow	horizontal bars at the top			
Underflow	horizontal bars at the bottom			
Display time	0.1 to 10.0 seconds			
Input	Measuring range	Ri	Measuring error	Digit
-5...75 mV	0...60 mV	~12 kΩ	0.2 % of measuring range	±1
-15...180 mV	0...150 mV	~60 kΩ	0.2 % of measuring range	±1
-30...360 mV	0...300 mV	~30 kΩ	0.2 % of measuring range	±1
-100...1200 mV	0...1000 mV	~200 kΩ	0.2 % of measuring range	±1
Digital input	< 2.4 V OFF, 10 V ON, max. 30 VDC; R _i ~ 5 kΩ			
Accuracy				
Drift of temperature	100 ppm / K			
Measuring time	0.1...10.0 seconds			
Measuring principle	U/F-conversion			
Resolution	approx. 18 Bit at 1s measuring time			
Output				
Analog output	0/4-20 mA / burden 350 Ohm; 0-10 VDC / burden 10 kOhm, 16 bit			
Switching output	2 PhotoMos (closer)	30 VDC/ADC, 0.4 A		
Power supply	100-240 VAC 50/50 Hz / DC +/- 10% (max. 5 VA) 24 VDC +/- 10 % galv. insulated (max. 4 VA)			

Memory	EEPROM
Data life	≥ 100 years at 25°C
Ambient conditions	
Working temperature	0...50°C
Storing temperature	-20...80°C
Weathering resistance	relative humidity 0-80% on years average without dew
EMV	
	EN 61326, EN 55011
CE-sign	
	Conformity to directive 2004/108/EG
Safety standard	
	According to low voltage directive 2006/95/EG EN 61010; EN 60664-1

10. Safety advices

Please read the following safety advices and the assembly in *chapter 2* before installation and keep it for future reference.

Proper use

The **M3-72-device** is designed for the evaluation and display of sensor signals.



Danger! Careless use or improper operation can result in personal injury and/or damage to the equipment.

Control of the device

The panel meters are checked before dispatch and sent out in perfect condition. Should there be any visible damage, we recommend close examination of the packaging. Please inform the supplier immediately of any damage.



Installation

The **M3-72-device** must be installed by a suitably **qualified specialist** (e.g. with a qualification in industrial electronics).

Notes on installation

- There must be no magnetic or electric fields in the vicinity of the device, e.g. due to transformers, mobile phones or electrostatic discharge.
- The **fuse rating** of the supply voltage should not exceed a value of **6A N.B. fuse**.
- Do not install **inductive consumers** (relays, solenoid valves etc.) near the device and **suppress** any interference with the aid of RC spark extinguishing combinations or free-wheeling diodes.
- Keep input, output and supply lines separate from one another and do not lay them parallel with each other. Position “go” and “return lines” next to one another. Where possible use twisted pair. So, you receive best measuring results.
- Screen off and twist sensor lines. Do not lay current-carrying lines in the vicinity. Connect the **screening on one side** on a suitable potential equaliser (normally signal ground).
- The device is not suitable for installation in areas where there is a risk of explosion.
- Any electrical connection deviating from the connection diagram can endanger human life and/or can destroy the equipment.
- The terminal area of the device is part of the service. Here electrostatic discharge needs to be avoided. Attention! High voltages can cause dangerous body currents.
- Galvanic insulated potentials within one complex need to be placed on an appropriate point (normally earth or machines ground). So, a lower disturbance sensibility against impacted energy can be reached and dangerous potentials, that can occur on long lines or due to faulty wiring, can be avoided.

11. Error elimination

	Error description	Measures
1.	The unit permanently indicates overflow. 	<ul style="list-style-type: none"> • The input has a very high measurement, check the measuring circuit. • With a selected input with a low voltage signal, it is only connected on one side or the input is open. • Not all of the activated supporting points are parameterised. Check if the relevant parameters are adjusted correctly.
2.	The unit permanently shows underflow. 	<ul style="list-style-type: none"> • The input has a very low measurement, check the measuring circuit . • With a selected input with a low voltage signal, it is only connected on one side or the input is open. • Not all of the activated supporting points are parameterised. Check if the relevant parameters are adjusted correctly.
3.	The word " HELP " lights up in the 7-segment display.	<ul style="list-style-type: none"> • The unit has found an error in the configuration memory. Perform a reset on the default values and re-configure the unit according to your application.
4.	Program numbers for parameterising of the input are not accessible.	<ul style="list-style-type: none"> • Programming lock is activated • Enter correct code
5.	" ERR " lights up in the 7-segment display	<ul style="list-style-type: none"> • Please contact the manufacturer if errors of this kind occur.
6.	The device does not react as expected.	<ul style="list-style-type: none"> • If you are not sure if the device has been parameterised before, then follow the steps as written in <i>chapter 6</i>. and set it back to its delivery status.

